

FORD RANGER MONSTER TRUCK



Model: DK-MT550
Age Range: 37-96 Month
Maximum Weight: 35 KGS
Execution Standard:
GB6675&GB19865 ☐
EN71&EN62115 ☐

AGES 3+



 Pictures are for reference only, please adhere to the original products as standard



All spare parts When open the carton



Assembling Procedure (Must be assembled by Adults)

1. Installation of Axle

(1) Take out of the back axle.



(2) Loose the M10 screw, and take out each of the gasket and plum blossom shape.



(3) Insert the back axle into the motors and back board.



2. Installation of wheels



Put the bearing into the bearing



Please take out sleeves from the screw&bolts bags and put into inner and outer sides of front wheels, as well as outer sides of back wheels, and then put one metal gasket into the axle, and then put wheel into the axle, insert the cotter pins to the hole on the axle, and then make the cotter pin across(refer to the photo). Finally, please put the cover onto the wheels.

3. Installation of rear view mirrors



4. Installation of steering wheel



Due to the reason of movement of steering tube, sometimes there is possibility that the hole on the steering wheel and the hole on the steering tube can not match well. If this happens, please use one hand to hold the hook under the car body in order to fix the steering tube. (Referring to the picture)

5. Installation of window shield



Please first insert the window shield into the car, and then use the screw to fix them

6. Installation of hood



Insert the hood to the car and then use screw to fix.
Please aim the retaining grooves

7. Power Connection



Please connect power line interface according to the photo above.

8. Installation of Hand Rail and Searching lights



Firstly, please connect SM terminals both from searching lights and the car body. Secondly, please push the searching lights hard into the car body. (Referring to the photo above)



Insert the hand rail into the car body as the same. (Referring to the photo above)

9: Installation of seat



Firstly, insert the rotary knobs of the seat into the car body, and then screw them. (Referring to the photo above.)

Specifications

Item	Specifications
Battery	12V10AH*1 / 12V7AH*2
Motor	35W
Available Ages	Children from 37-96 month
Maximum Weight	35KGS
Size	134*103*95cm
Speed	3-5km/h
Charging Time	8-12hours
Remote Control Batteries	2PCS of AAA Batteries
Charger	Input:220V Output:DC12v1000MA

CHARGING PRECAUTIONS

Battery polarity cannot be reversed, please ensure the red wire is connected to the red battery terminal and the black wire is connected to the black battery terminal.

- Press the power switch to OFF position to turn the power off.
- Open the seat,connect the battery plug,red to red.
- Never drain battery completely or to a crawling speed,recharge the battery when a decrease in speed and power is noticed warranty will be voided if misuse has occurred.
- Battery charging must be done by adults only.Never allow children to charge the battery.A child could be injured by the electricity involved in charging the battery.
- Please don't connect the wires to a short circuit.

The charger and the battery are not a toy.Do not allow children to play with the charger and the battery.


Only operate the battery and charger specified according to the manual instructions.

- Please do not open the battery and the charger.
- To maintain safety of vehicle, always secure the battery with the bracket.
- The battery must be handled and operated by adults only: the battery is heavy and contains sulfuric acid(electrolyte).Dropping the battery could result in serious injur
- Before charging the battery check if wear or damage to the battery,charger , the connectors and other parts .If any damage is found , the charger should be repaired or replaced immediately .Do not use a damaged charger.
- It is normal for the adaptor to feel warm during charging,,but if the charger feels too hot,stop charging immediately and check the battery and adaptor.

When charging turn of the power switch.
Please charge the battery for 8-10 hours after first use.
Subsequent charges should be 6-8 hours but not exceeding 10 hours.
If not being used batteries should still be charged at least once a month to keep the cells active.
1.Plug the charge into the charging socket.
2.Plug the other end of the charger into your wall socket.
Batteries are perishable items that are subject to under and overcharging, please observe the charging times.Charge Hole


TROUBLESHOOTING

Problem: The car will not move
Answer 1: Please make sure the charger has been removed from the car charging point.
Answer 2: The battery is low on charger. Please charger for 6-8 hours but not exceeding 10hours.
Charge at least once a month to keep the cells activ

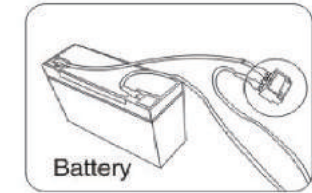

To avoid fuse cut off the power:
1.Max:30kgs, overload is forbidden
2.Do not drag ay item behind this product
3.Do not allow water or other liquids dip the electrical parts.
4.Do not change the line system by yourself.

Please take the seat away when the car needs to be charged and the battery is under the seat. The battery is removable so that can be charged either inside the car or outside the car.

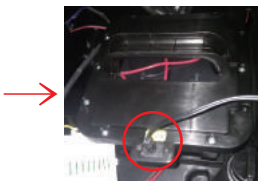

Charger



Two holes socket.

WARNING

- For safe driving, please kindly pay attentions to the following warning matters.
 - The product must be assembled and adjusted by adult, please keep children away from moving parts.
 - The product doesn't apply to 36-month and younger children due to internal small parts
 - During driving, a child must be fixed by seat belt properly. Do not close to an fire!
 - Any child must be supervised by adult while using the product and such the adult caregiver should not leave during driving process.
 - Do not allow your children to stand or play on the food pedal or in the electric
- The vehicle maximum load weight is 35KG, and please do not use on overload, The product applies to children at 37-96 months.

- The toy should not be connected to excessive powers (more than the quantity specified herein), and it should not be operated during charging process.
- Must with the protection device, can't use as traffic tools.
- This toy without braking device.
- Instructions for remote controller batteries.
- All batteries should be inserted with the correct polarity.
- Non-rechargeable battery should not be charged, please remove any running-off battery from the toy.
- Do not use old and new batteries together, or mix different types of batteries.
- Power terminals should not be short-circuited.
- Any rechargeable battery must only be charged under adult's supervision.
- Rechargeable batteries should be removed from the toy before charging.
- Exhausted batteries are to be removed from the toys

TROUBLESHOOTING

Problem:The car only runs for a short time


Answer 1:The battery is low on charge. Please change for 6-8 hours but not exceeding 10 hours.
Change at least once a month to keep the active.
Answer 2:Battery ageing
The battery may need to be replaced depending on it's charging history and age.
Problem: The sounds do not work.
Please ensure the volume is turned up and the Mp3 lead is not connected.
The steering wheel sounds will not work when the MP3 is plugged into the car.
Problem: Charger overheating
It is normal for the battery and charger to warn slightly during Charging, if they feel excessively hot then please Check for a current overload or battery short circuit

WARNING:Vehicle must be charged fully before use.
Please read manual carefully before use.

Adult assembly required.
This toy have no brake.
Not to be used in traffic
Always wear a helmet and protective clothing when riding.
Continuous adult at all times.
Plsease keep the manual and packing for future reference as it contains important information
The instructions for used should bear a reminder that the toy should be used with caution since skill Is require to avoid falls or collisions causing injury to the user or third parties.

SAFETY PRECAUTIONS

01. While riding , adult supervision is required all the time
02. Always wear a helmet when driving/
03. Please dont drive near road or on the footpath.
04. Itis not recommended to drive the vehicle on wet surface or on slope greater than 15-degree.
05. It is recommended to drive this vehicle on smooth surface only.
06. Please dont driving this vehicle outdoors when it is raining.
07. Make sure that the vehicle stop completely before changing direction from forward to reverse
08. Please dont allow children to operate the charger or play with the battery
09. Clean the vehicle with a dry cloth only.
10. Please follow the correct weight and age limits allowed to drive this vehicle.
11. It is prohibited to change the circuit or add other electric parts.
12. Adults must teach their children around safe driving procedures.
13. Please turn the power off when not in use.
14. Check the seat to ensure it has been fitted and secured with a bolt before driving.
15. Inspect all wires and connection of the vehicle periodically.
16. Charging the battery should only be done by adults.
17. Charging plug is located underneath the seat.
18. In order to avoid accidents, please ensure the vehicle is safe before driving.
19. Please dont let any child touch the wheels or be near them when the car is moving.
20. Please mind fingers in opening and closing doors.

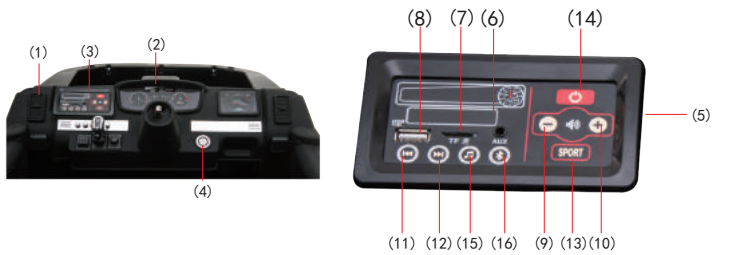


1. Imitation of air conditioner	9. Volume decrease
2. Dashboard	10. Volume increase
3. multi-function display	11. The last song
4. Key switch	12. The next
5. MP3	13. Cancel
6. Display	14. Display switch
7. TF socket	15. Music
8. USB socket	16. Bluetooth

- 1.Press the music button on the steering wheel for horn or music.
 - 2.Attach the MP3 lead to your advice to play or own music through the car.
- Please note the steering wheel sounds wheel not work when the MP3 lead is connected.



Operations Guide
First time to use(Or replace the battery)
select not to pair,the car can move after turning on power.
If select to be paired,please follow the bellows:
Step 1 Open the remote control battery compartment,put two AAA1.5V batteries into the battery compartment(pay attention to the battery cavity polarity),close the cap,the frequency lamp flashes if the battery is installed correctly.
Step 2 Turn the car power, hold press the frequency key for 2-3 seconds.
Step 3 Then turn on car power immediately, the frequency lights off.
Please repeat steps 23 if the paring not in success of frequency.
General use
1.Speed Selection - LOW speed:Only one lamp flashing;
MED speed - Two lamps flashing;
HIGH speed - Three lamps flashing.Each owns slow start and stop.
2.Press the STOP key will stop the car;Other keys like it meant.
3.The remote control will power off after 15's without operating,any key will power on.
Products through the FCC certification testing and ECM credential.
This remote must be used by adult only

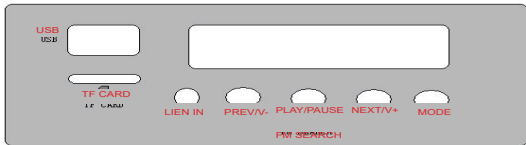

Story/V-: Mode of Story/V-
Pressing slightly and it will be prior music or broadcast channel. Pressing for a longer time and it will lower the volume.
Music/V+:Mode of Music/V+
Pressing slighltg and it will be next music or broadcast channel. Pressing for a longer time and it will higher the volume.
Song/XX: Mode of Songs
Pressing longer and it will search broadcasting station automaticly.
Education: Earlier education.
Mode: Radio, Bluetooth, SD Card, MP3, USB connector
Speaker: Horns of cars

Note on Safety

- 1.This vehicle is ont suitable for childeen under 36 months .Please use this vehicle under the superbision of adults.
- 2.Please keep this behicle far from pool,highway,slopes or other dangerous places
- 3.To avoid gearbox and motor damage.ensure the vehicle has complltrly stopped when shift gears.
- 4.Before using,parents should check the main parts:battery,charger. wires,plugs,shell and other pats for not damaging screw loose whether if there is potentialsecurith risks any damage found stop using until well repaired
- 5.To avoid rust lubricate the iron parts whith lubricating oil after using for some time
- 6.The vehicle should be kept away from fire and long-term light side-up forshortage upside down
- 7.Do not use the fuse not matching the product
- 8.Do not change the wire system by yourself the frpair work must be carred outunder the guidance of professingals and technical staff

Warning-When replacing a replaceable battery,first open the lid and take out the old battery.Put in the new battery,pay attention to the positive and negative poles,cover the lid.

WARNING!

For safety sake:
*Please use this vehicle under the adult guidance and supervision.
*Prohibited to use this product on the the road,slopes, highway or other dangerous places!
*When driving,children must wear shoes and helmet.
*When driving,children should be seating in the seat and fasten the seat belt
*The maximum loading capacity of the vehicle is 35KGS, and can take only One child,the users must be aged 37 months to 96 months!

WARNING!

The toy is to be assembled by an adult.
WARNING!
Warning!Not to be used in traffic.must be assembled by an adult.
This toy when in use,please in strict accordance with the manual safety
Operation,the startup is detection of tire braking function,the steering
Wheel fastening,seat safety,etc.
The toy should be used with caution since skill is required to avoid falls or
Collisions causing injury to the user or third parties.

Pictures are for reference only, please adhere to the original products as standard