


# Truck

## BATTERY POWERED RIDE-ON

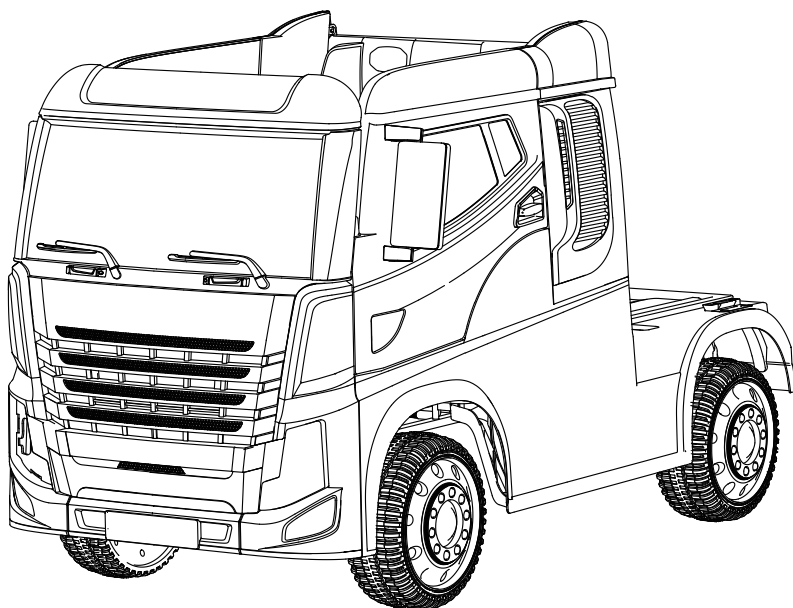

### Owner's Manual with Assembly Instructions

Styles and colo(u)rs may vary.  
Made in China.

The owner's manual contains important safety information as well as assembly, use and maintenance instructions.

The Ride-on Car must be assembled by an adult who has read and understands the instructions in this manual.

Keep the package away from children and dispose of properly before use.

**Keep this manual for future reference.**

On the purchase of your new Ride-On.

This ride-on will provide your child with many miles of riding of enjoyment. To help assure you and your rider a safe ride we ask you to please read this manual carefully, and keep it for future reference.

Follow the recommendations in this manual, they are designed to improve the safety and operation of your ride-on car and it's rider.

## **SPECIFICATIONS:**

|                |           |  |
|----------------|-----------|--|
| <b>Battery</b> | 12V7AH *1 |  |
| <b>Charger</b> | 12V1000mA |  |

**Suitable age:** 37-96 months

**Load Capacity:** Under 30kg

**Speed:** 3-5km/h

**Size of product:** 113.5 \* 66 \* 70 CM

**Power way:** Charging type

**Charge time:** 8-12 hours

 **WARNING!**

- **CHOKING HAZARD** - Small parts. Not suitable for children under 36 months. The product contains small parts, keep children away when assembling.
- **ADULT ASSEMBLY REQUIRED.**
- Always remove protective material and poly bags and dispose before assembly.
- Protective equipment should be worn. Always wear shoes and sit in the seat when operating the vehicle.
- Only drive on level ground. Never use on the lawn.
- Never leave a child unattended.
- Keep your hands, hair, and clothes away from moving parts.

 **SAFETY**


The following safety hazards may result in serious injury or death:

- Never leave child unattended. Direct adult supervision is required. Always keep child in view when child is in vehicle.
- To reduce the risk of injury, adult supervision is required. Never use in roadways, near motor vehicles, on or near steep inclines or steps, swimming pools or other bodies of water, always wear shoes, and never allow more than 1 rider.
- Never use in unsafe conditions such as snow, rain, loose dirt, mud, sand, or gravel, otherwise may result in an unexpected accident such as tipping over, and could damage the electrical system or battery
- Not to be used in traffic.
- This toy should be used with caution since skill is required to avoid falls or collisions causing injury to the user or third parties.
- This toy is unsuitable for children under 36 months due to its maximum speed; Maximum user weight is 30kg.
- This toy has no brake.

 **BATTERY INFORMATION**

- Non-rechargeable batteries are not to be recharged.
- Rechargeable batteries are to be removed from the toy before being charged.
- Rechargeable batteries are only to be charged under adult supervision.
- Different types of batteries or new and used batteries are not to be mixed.
- Batteries are to be inserted with the correct polarity.
- Exhausted batteries are to be removed from the toy.
- The supply terminals are not to be short-circuited.


HINT: Some parts shown are assembled on both sides of vehicle

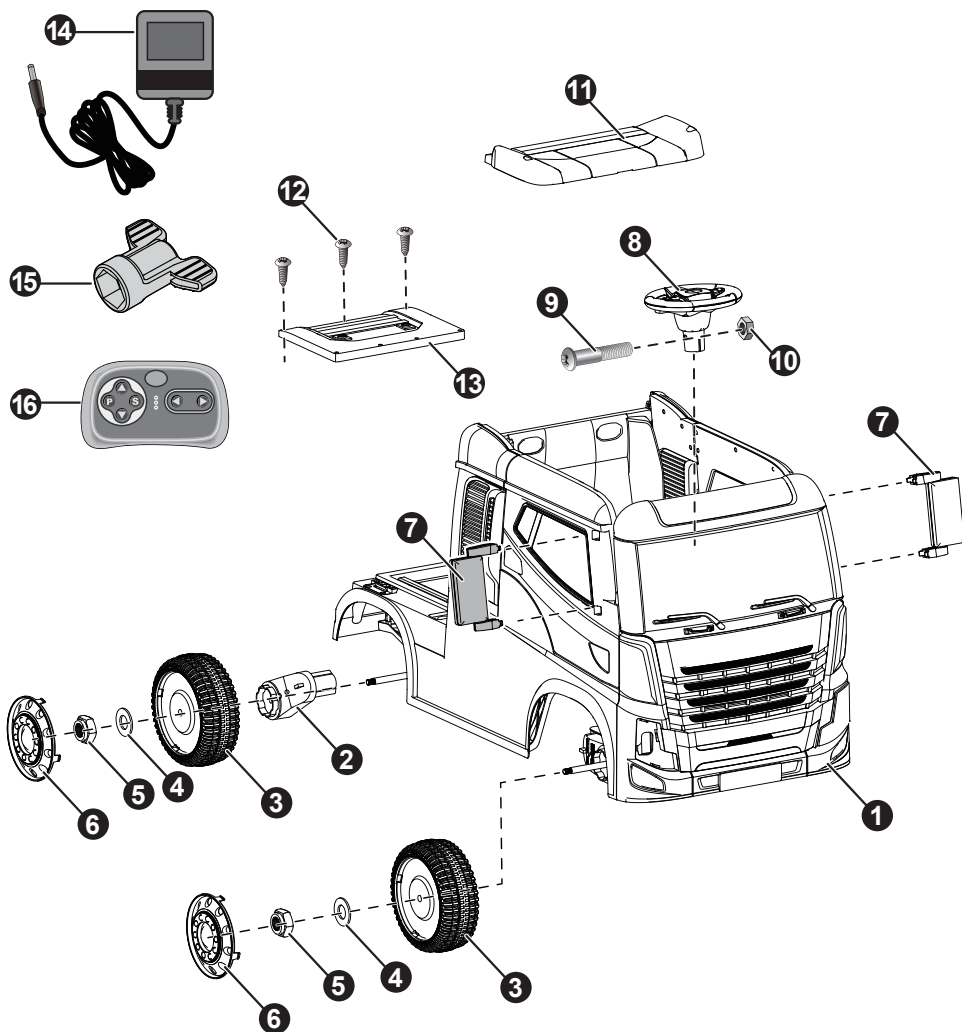

## Parts List | 4

| PART NO. | PART NAME           | Q'ty (pcs) |  |  | REMARKS                                    |
|----------|---------------------|------------|--|--|--------------------------------------------|
| 1        | Vehicle body        | 1          |  |  |                                            |
| 2        | Rear gear box       | 2          |  |  | one labeled "R", the other one labeled "L" |
| 3        | Wheel               | 4          |  |  |                                            |
| 4        | Ø12 washer          | 6          |  |  |                                            |
| 5        | Lock nut            | 4          |  |  |                                            |
| 6        | Wheel cover         | 4          |  |  |                                            |
| 7        | Side mirror         | 2          |  |  | Left and right                             |
| 8        | Steering wheel      | 1          |  |  |                                            |
| 9        | M5x35 machine screw | 1          |  |  | Placed on the steering wheel               |
| 10       | Ø5 nut              | 1          |  |  | Placed on the steering wheel               |
| 11       | Seat                | 1          |  |  |                                            |
| 12       | Ø4x12 screw         | 3          |  |  |                                            |
| 13       | Rear cover          | 1          |  |  |                                            |
| 14       | Charger             | 1          |  |  |                                            |
| 15       | Remote controller   | 1          |  |  |                                            |
| 16       | Motor hood          | 1          |  |  | For R/C type only                          |
|          |                     |            |  |  |                                            |


### Assembly tools required:

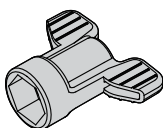

Spanner




**Screwdriver  
(not included)**

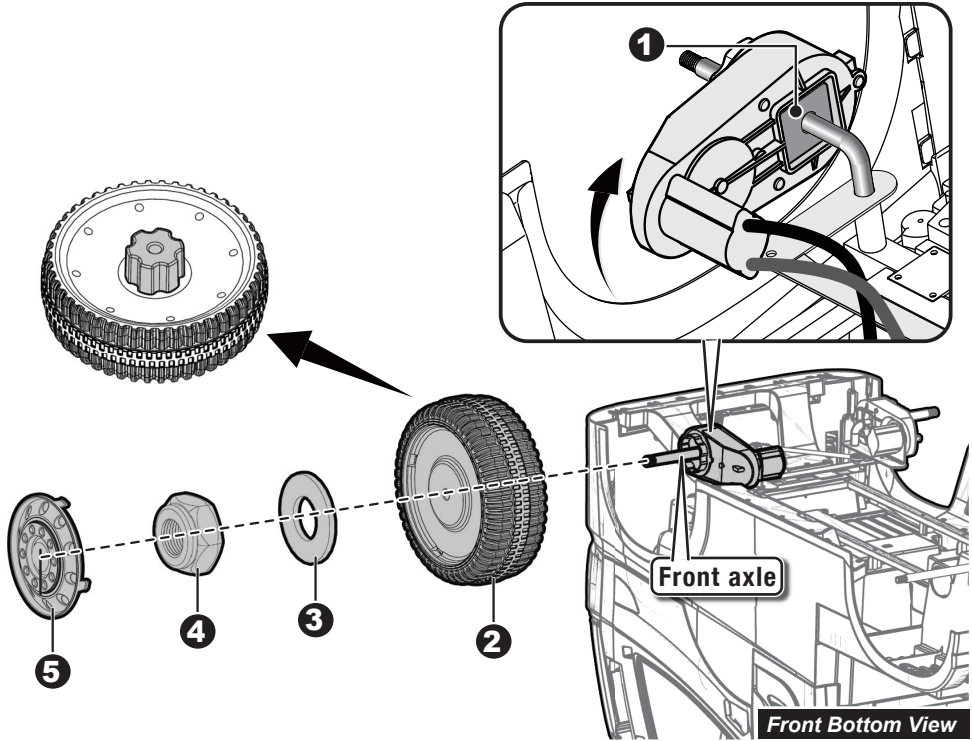

Remove all the parts from the front axle.

1. Adjust the gear box on the front axle so that the gear box in the correct position as shown.
2. Slide a wheel (EVA wheel )onto the front axle.
3. Slide a Ø12 washer onto the rear axle.
4. Tighten a lock nut to the end of the rear axle with a spanner.
5. “Snap” the wheel cover to the wheel.

Repeat the above procedure to assemble the other front wheel.

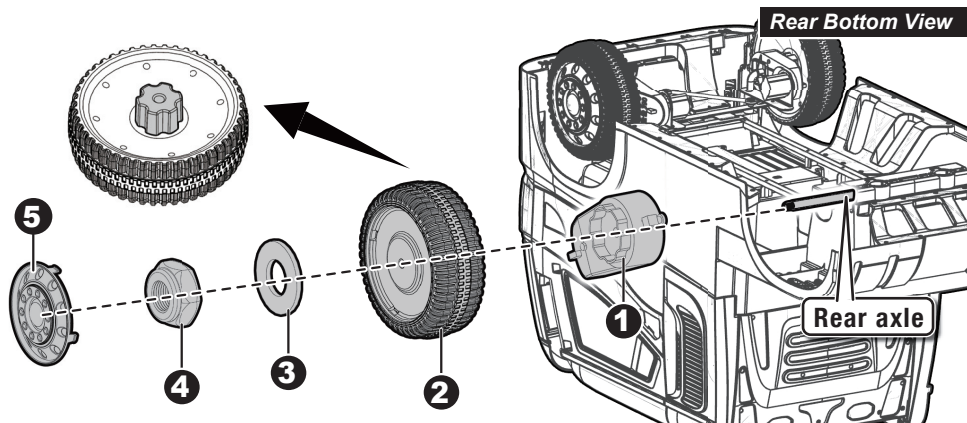

1. Slide the rear gear box onto the rear axle. ("R" labeled gear box should be fit to the "R" side, "L" labeled gear box should be fit to the "L" side), keep the connector and the motor on the gear box pass through the larger hole and out where the battery sits.

2. Slide the wheel onto the rear axle.


3. Slide the Ø12 washer onto the rear axle.

4. Tighten a lock nut to the end of the rear axle with a spanner.

5. "Snap" the wheel cover to the wheel.

Repeat the above procedure to assemble the other rear wheel.


6. Turn the vehicle body upright. Plug the white vehicle connectors into the white motor connectors.

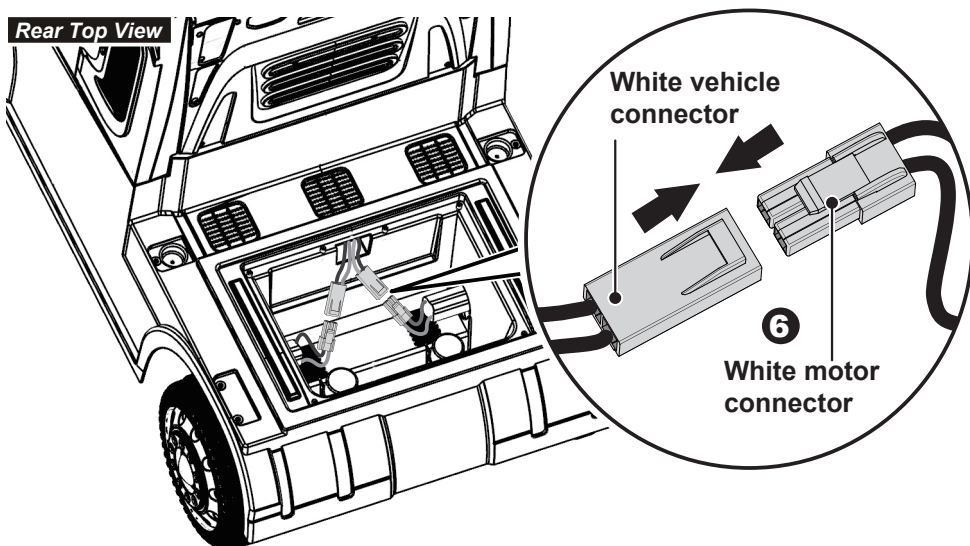

## Attach the Steering Wheel | 7

**HINT:** If the steering wheel of your vehicle equipped with the sound function, please follow the steps 1-4 to add the batteries (Not Included), and refer to the battery information on page 2.


1. With a screwdriver loose the screw on the battery cover located in the center of the steering wheel.
2. Remove the battery cover from the top of the battery compartment.
3. Insert 2x1.5 AA batteries in their correct polarities.
4. Place the battery cover over the battery compartment and fasten with the screw you removed in step one.

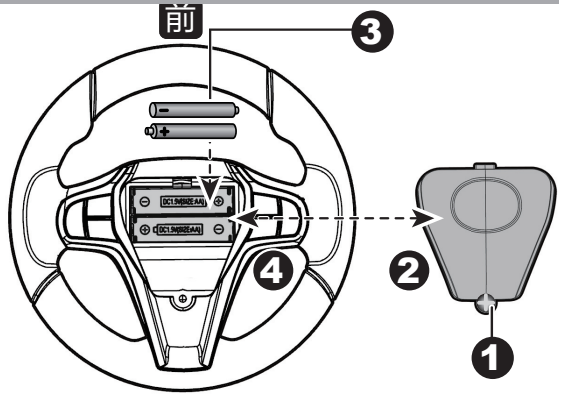


## Attach the Steering Wheel


Remove the M5x35 machine screw and Ø5 nut from the steering wheel.

5. Place the steering wheel over the the steering column, protruding from the middle of the steering wheel base.
6. Align the holes on each side of steering wheel with the holes at the end of the steering column.
7. Fasten a nut on the opposite end of the screw to secure the steering wheel to the steering column.

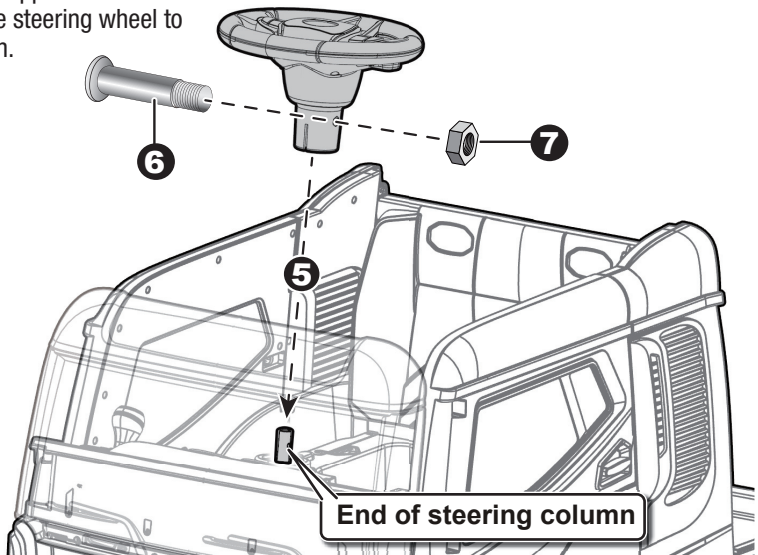


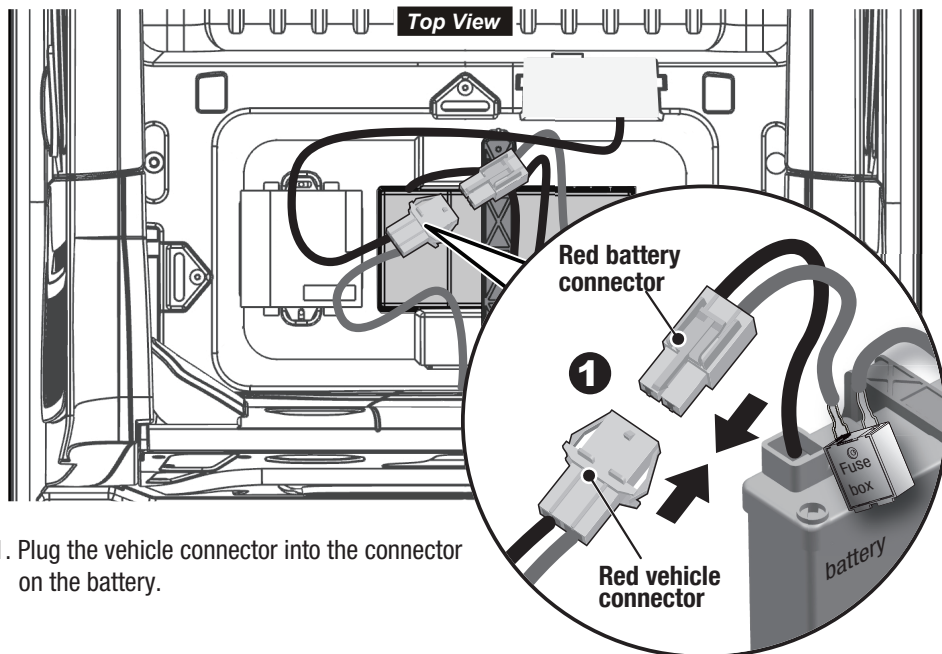


1. Plug the vehicle connector into the connector on the battery.

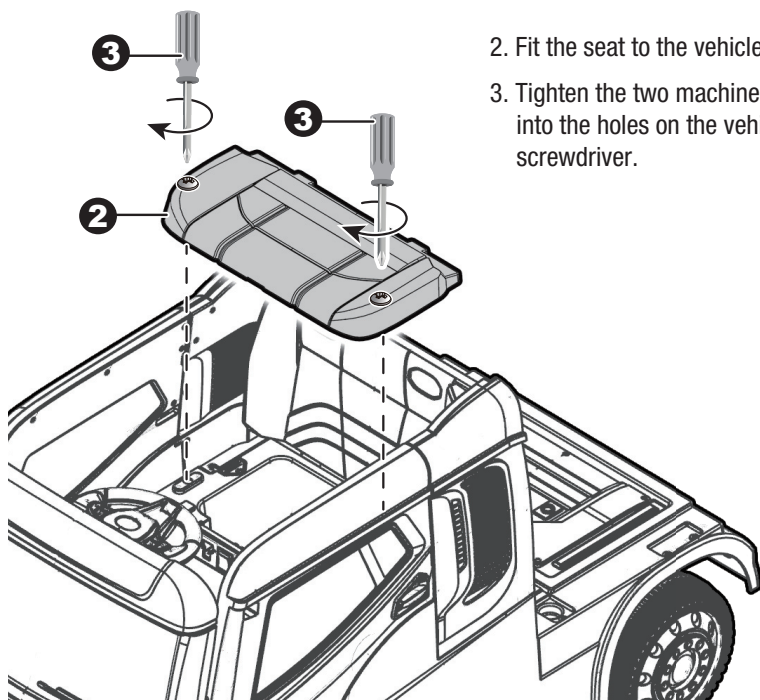

2. Fit the seat to the vehicle body.
3. Tighten the two machine screws on the seat into the holes on the vehicle body with a screwdriver.

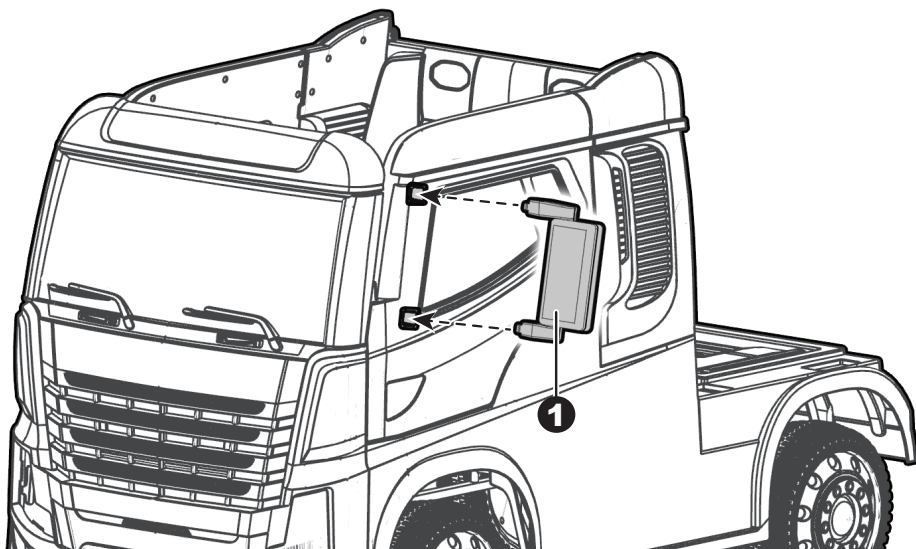


1. “Snap” the side mirror to the each door.

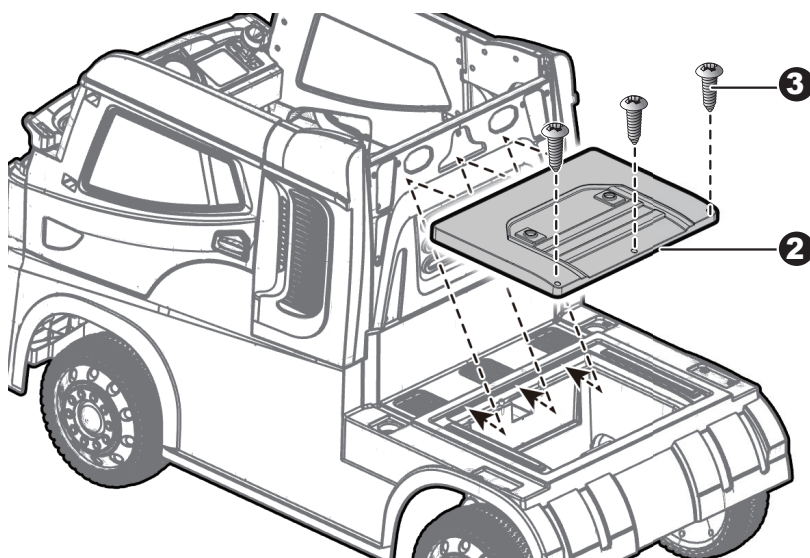

2. Fit the rear cover to the vehicle body,.

3. Insert three Ø4x12 screws, and tighten them with a screwdriver.

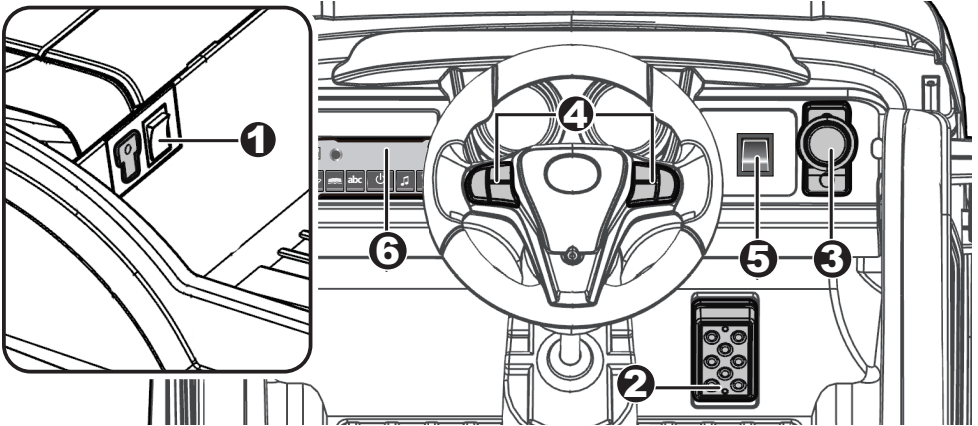

- 1. Power switch (below the seat):** Turns the vehicle on and off.
- 2. Foot pedal:** Applies power (speed) to the vehicle.
  - To move the car, press the pedal down.
  - To brake or slow down, release pressure from the pedal.
- 3. Forward/reverse switch:** Changes the direction that vehicle moves from forward to reverse.
  - To move the vehicle forward, shift the lever to top position.
  - To move the vehicle backward, shift the lever to down position.
- 4. Sound buttons (if equipped):** Press for sound playing.
- 5. High/Low speed switch:**

Operates the vehicle to move in high speed or low speed.

HINT: The vehicle is designed to operate in low speed only in reverse.
- 6. Music player (if equipped).**

## **IMPORTANT**

- Always stop vehicle when changing the speed (if equipped) or direction to avoid damage the gears and motor.
- **HIGH SPEED (if equipped):** Make sure your child knows how to steer, how to start and stop the product and knows the rules for safe driving.



**Use the vehicle on generally level ground ONLY!**



**DO NOT Use the vehicle on Lawn space!**

## **WARNING!**

- **ONLY an adult is allowed charge and recharge the battery!**
- **This product with Charging Protection: when charging, all functions will be cut off.**

- The POWER SWITCH must be turned in OFF position when charging.
- Before the first use, you should charge the battery for 4-6 hours. Do not recharge the battery for more than 10 hours to avoid overheating the charger.
- When the vehicle begins to run slowly, recharge the battery.
- After each use or once a month minimum recharge time as 8 to 12 hours, less than 20 hours at most.
- Use the only rechargeable battery and charger supplied with your vehicle. NEVER substitute the battery or the charger with another brand. Using another battery or charger may cause a fire or explosion.
- Do not use the battery or charger for any other product.
- If your ride-on with a Digital voltmeter(IF EQUIPPED), the magnitude of voltage will tell you how much power is remaining in the battery when you must recharge the battery. Make sure the vehicle is stop!

|             |                |                                 |
|-------------|----------------|---------------------------------|
| 12V product | less than 12.5 | The battery needs to be charge. |
|             |                |                                 |

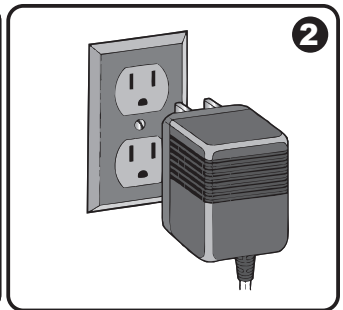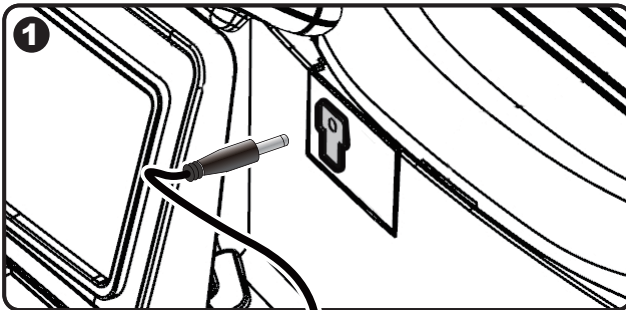

1. Plug the charger port into the input socket (the socket is below the seat).
2. Plug the charger plug into a wall outlet. The battery will begin charging.

## **Battery Disposal**



The battery will eventually lose the ability to hold a charge. Depending on the amount of use, and varying conditions, the battery should operate for one to three years.

Important! Recycle the dead battery responsibly. The battery contains lead acid (electrolyte) and must be disposed of properly and legally. It is illegal in most areas to incinerate lead acid batteries or dispose of them in landfills. Take it to a federal or state-approved lead acid battery recycler, such as local automotive battery retailer.

Do not throw the battery away with your regular household waste!

| Problem                                                        | Possible Cause                                  | Solution                                                                                                                                                     |
|----------------------------------------------------------------|-------------------------------------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Vehicle does not run                                           | Battery low on power                            | Recharge battery.                                                                                                                                            |
|                                                                | Thermal fuse has tripped                        | Reset fuse, see <Fuse>                                                                                                                                       |
|                                                                | Battery connector or wires are loose            | Check that the battery connectors are firmly plugged into each other. If wires are loose around the motor <b>contact your distributor please.</b>            |
|                                                                | Battery is dead                                 | Replace battery, <b>contact your distributor please.</b>                                                                                                     |
|                                                                | Electrical system is damaged                    | <b>Contact your distributor please.</b>                                                                                                                      |
|                                                                | Motor is damaged                                | <b>Contact your distributor please.</b>                                                                                                                      |
| Vehicle does not run very long                                 | Battery is under charged                        | Check that the battery connectors are firmly plugged into each other when recharging                                                                         |
|                                                                | Battery is old                                  | Replace battery, <b>contact your distributor please.</b>                                                                                                     |
| Vehicle runs sluggishly                                        | Battery low on power                            | Recharge battery, <b>contact your distributor please.</b>                                                                                                    |
|                                                                | Battery is old                                  | Replace battery, <b>contact your distributor please.</b>                                                                                                     |
|                                                                | Vehicle is overload                             | Reduce weight on vehicle.                                                                                                                                    |
|                                                                | Vehicle is being used in harsh conditions       | Avoid using vehicle in harsh conditions, see <Safety>.                                                                                                       |
| Vehicle needs a push to go forward                             | Poor contact of wires or connectors             | Check that the battery connectors are firmly plugged into each other. If wires are loose around the motor, <b>contact your distributor please.</b>           |
|                                                                | “Dead Spot” on motor                            | A dead spot means the electric power is not being delivered to the terminal connection and the vehicle needs repair. <b>Contact your distributor please.</b> |
| Difficult shifting from forward to reverse or vice-versa       | Attempting to shift while the vehicle is motion | Completely stop the vehicle and shift, see <Use Your Ride-On>                                                                                                |
| Loud grinding or clicking noises coming from motor or gear box | Motor or gears are damaged                      | <b>Contact your distributor please.</b>                                                                                                                      |
| Battery will not recharge                                      | Battery connector or adapter connector is loose | Check that the battery connectors are firmly plugged into each other.                                                                                        |
|                                                                | Charger not plugged in                          | Check that the battery charger is plugged into a working wall outlet.                                                                                        |
|                                                                | Charger is not working                          | <b>Contact your distributor please.</b>                                                                                                                      |
| Charger feels warm when recharging                             | This is normal and not a cause for concern      |                                                                                                                                                              |

Completely read through this manual and the troubleshooting guide table before calling. If you still need help resolving the problem **Contact your distributor please.**

- It is parents' responsibility to check main parts of the toy before using, Must regularly examine for potential hazard, such as the battery, charge, cable or cord, plug, screws are fastening enclosure of other parts and that in the event of such damage, the toy must not be used until that damage had been properly removed.
- Park the vehicle indoors or cover it with a tarp to protect it from wet weather.
- Recharge the battery after each use. Only an adult can handle the battery. Recharge the battery at least once a month when the vehicle raider is not being used.
- Do not wash the vehicle with a hose. Do not wash the vehicle with soap and water. Do not drive the vehicle in rainy or snowy weather. Water will damage the motor, electric system and battery.
- Clean the vehicle with a soft, dry cloth. To restore shine to plastic parts, use a non-wax furniture polish. Do not use car wax. Do not use abrasive cleaners.
- When not using, all the electrical source should be turn off. Turn off the power switch and disconnect the battery connection.

## **Fuse**

The battery features a thermal fuse with a reset fuse that will automatically trip and cut all power to the vehicle if the motor, electric system or battery is overloaded. The fuse will reset and power will be restored after the unit is turned OFF for 20 seconds and then turned ON again. If the thermal fuse trips repeatedly during normal use, the vehicle may need repair. Contact your distributor please.

To avoid losing power, follow these guidelines:

- Do not overload the vehicle.
- Do not tow anything behind the vehicle.
- Do not drive up steep slopes.
- Do not drive into fixed objects, which may cause the wheels to spin, causing the motor to overheat.
- Do not drive in very hot weather, components may overheat.
- Do not allow water or other liquids to come in contact with the battery or other electric components.
- Do not tamper with the electric system. Doing so may create a short, causing the fuse to trip.

**Our products are suitable for  
ASTM F963; GB6675; EN71 and EN62115 standard.**



