

Please read the manual before using the product. The manual and carton contain important information, please keep them properly for later references. If failure to follow the instruction in the manual, it might be dangerous for your child.

In order to improve the product and quality, we may change the parts of structure, appearance, packing method, assembly method and function of the product without any notice. When there is any difference between the manual and the product, please subject to the actual product. We are sorry for any inconvenience.

Executive standard:

The assembly manual of
battery operated motorcycle
Model: SX8638 (12V)

EN71-1

EN71-2

EN71-3


EN62115



WARNING:

Products should be assembled by an adult. Protective equipment should be worn. Not to be used in traffic. Not suitable for children under 3 years. Choking hazard- small parts. In unassembled state, contains potentially hazardous small parts. Please keep out of the reach of small children. Pay attention to the potential hazards of using the toy in areas other than private grounds. This toy is unsuitable for children under 3 years due to its maximum speed.

No.	Parts Name	PICTURE	QTY	No.	Parts Name	PICTURE	QTY
1	Motorcycle body		1	2	Front wheel		1
3	Front mudguard		1	4	Fastener		2
5	Motorcycle head		1	6	Windshield		1
7	Front turn signal		2	8	Handlebar cover		1
9	Footrest (left + right)		2	10	Training wheel		2
11	Brake disc		1	12	M4X14 screw		6
13	M4X10 screw		3	14	Socket wrench		1
15	Grey wrench (M8)		2	16	User manual		1
17	Charger		1				

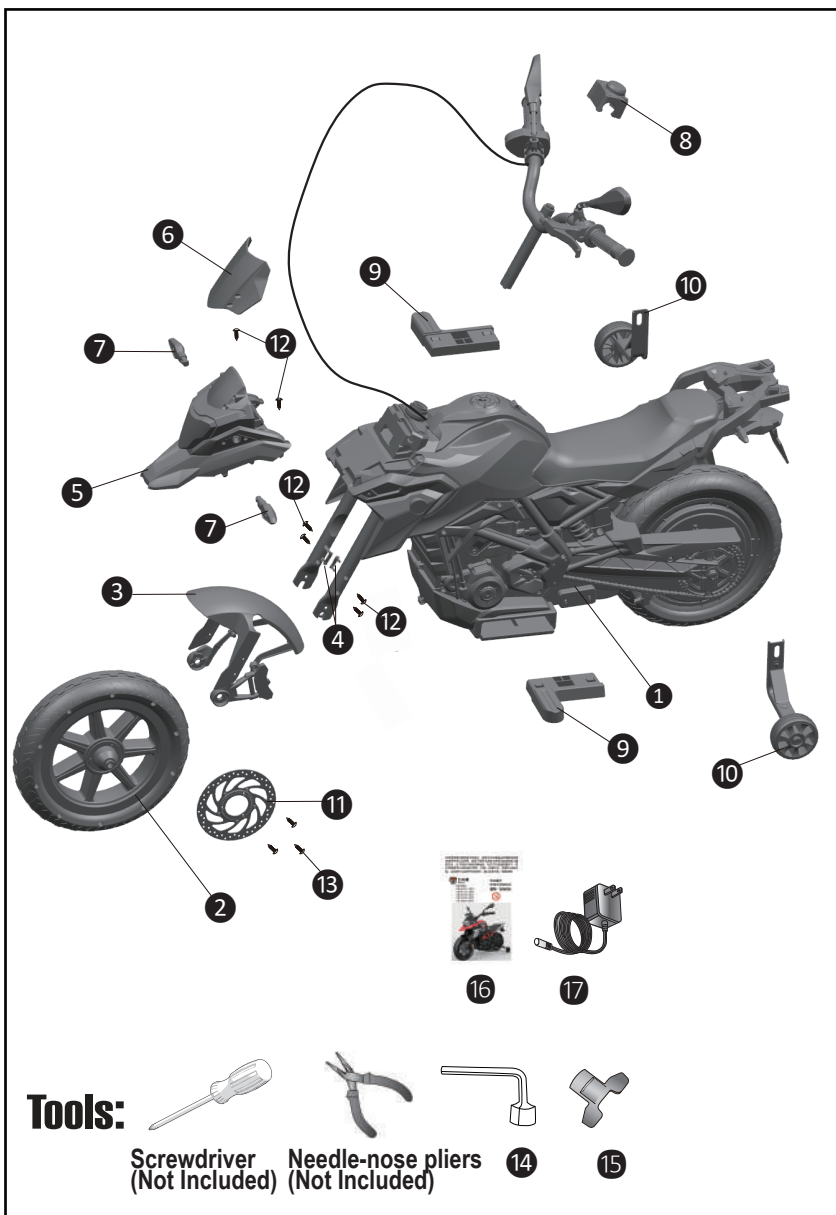

Disclaimer:

The pictures in this instruction are for assembly reference only. Please refer to the actual product.

WARNING:

This product is not the vehicle for transportation, it should be used under adult guidance. Parents should ensure that children have taken the safety measures before use.

The toy should be used with caution since skill is required to avoid falls or collisions causing injury to the user or third party.

PRODUCT SPECIFICATIONS

Battery	12V7AH/12V9AH/12V10AH/12V14AH
Main material	PP
Suitable age	3-8 years old
Weight limit	30kg
Product size	102*65*76.5cm
Speed	3-6km/h
Runtime	1 hour after charging 8-12 hours (Results vary based on riding conditions)
Charger	Input AC100-240V Output 12V500mA-1500mA Only use the supplied charger. Using a charger not supplied by the manufacturer can damage the product.
Fuse	Auto-reset fuse

Assembly instruction


Car assembling should be done by the adults.

Take care of small parts. To avoid choking hazard, keep children away while assembling. Children under 36 months are prohibited to use.

Please count all the parts carefully before assembling and dispose the plastic bag properly. To avoid choking hazard, children are not allowed to play with the bag.


1. Battery connection

Using a screwdriver, remove four screws on the battery cover. Connect the power by matching two red plugs. Turn on the power switch to test the power supply, then reinstall the battery cover and tighten it with a screwdriver and four screws.

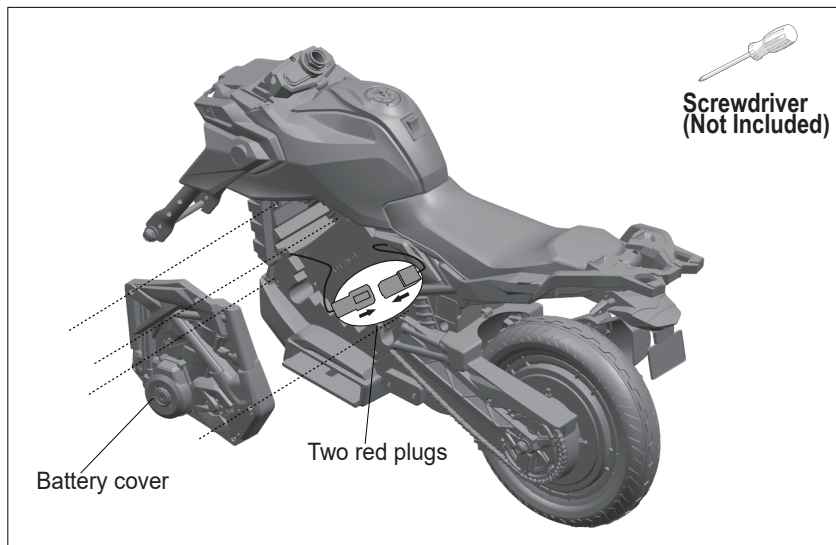


2. Footrest assembly

Identify the left and right footrests **9**, align them with the grooves on the left and right sides on the vehicle, push them into place.

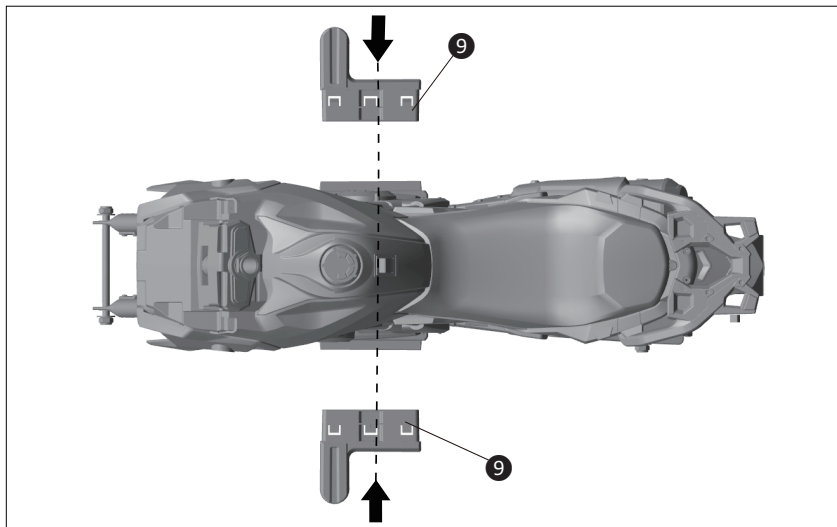

3. Training wheel assembly


Using the grey wrench (M8) **15**, loosen two lock nuts from the screw stem. Attach two training wheels **10** to the screw stems on rear wheel. Using the grey wrench (M8) **15**, secure them with two lock nuts.

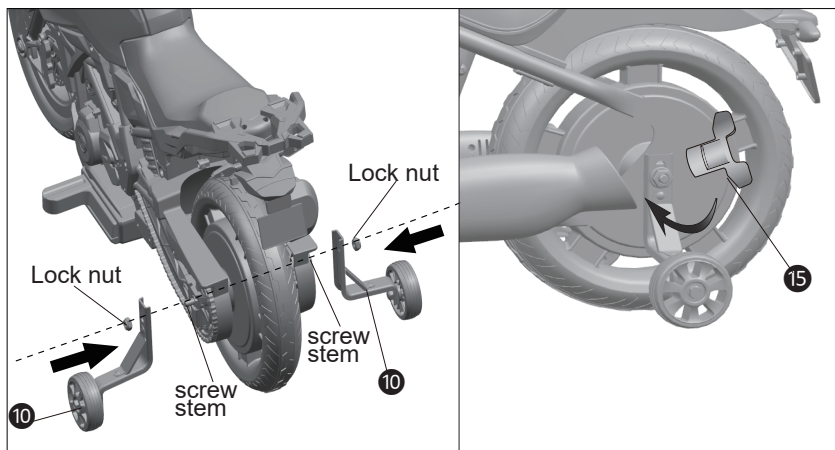


4. Front mudguard assembly

(a). Cut off the cable tie to remove the front wheel ❷. Using the grey wrench (M8) ❶ and needle-nose pliers, remove the front axle. Front axle is not needed during the following assembling process.

(b). Pass the front mudguard ❸ through the front fork.

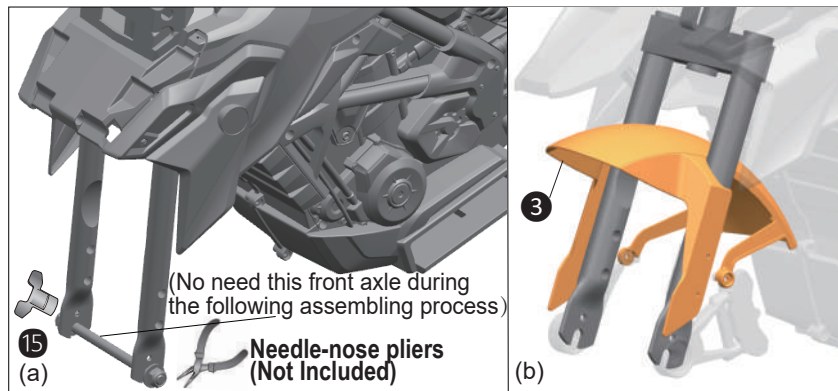


(c). Attach two fasteners ❹ into the holes on front fork, pull the outer plastic part out. Using a screwdriver, secure two fasteners ❹ with four M4X14 screws.

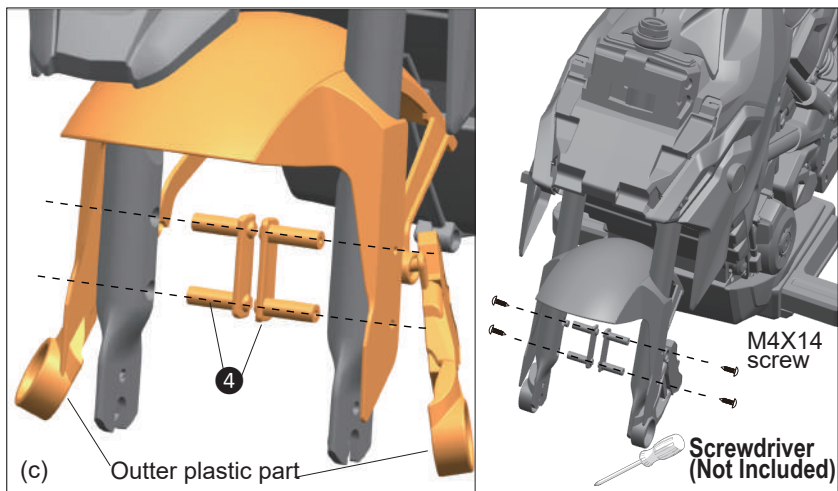

5. Brake disc assembly

(a). Insert the brake disc **11** into the left side of front wheel **2**, using the screwdriver, fasten it with three M4X10 screws.

(b). Using the grey wrench (M8) **15**, loosen two lock nuts and safety hook washers from front wheel **2**, set them aside for later use.

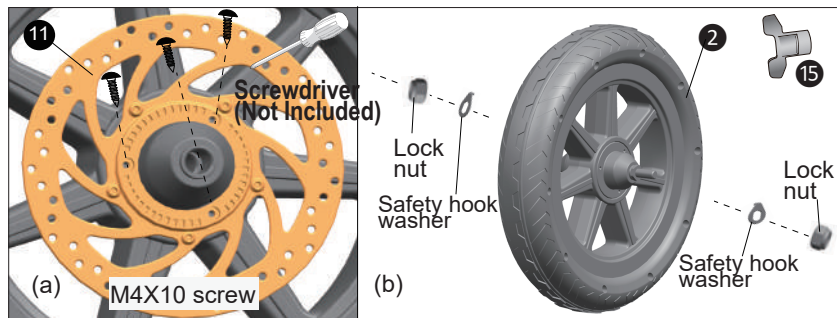

6. Front wheel assembly


(a). Insert the assembled front wheel **2** into the front fork, pull the outer plastic part out. Insert two safety hook washers on both sides, ensure the tab of the safety hook washers into the locating hole on the front fork.

(b). Install the left and right outer plastic part onto the front axle, and finally tighten the two lock nuts with the grey wrench (M8) **15**.




7. Windshield assembly

Using a screwdriver, remove four screws from the motorcycle head **5**. Attach the windshield **6** to the motorcycle head **5**, then secure it with the four screws using a screwdriver.

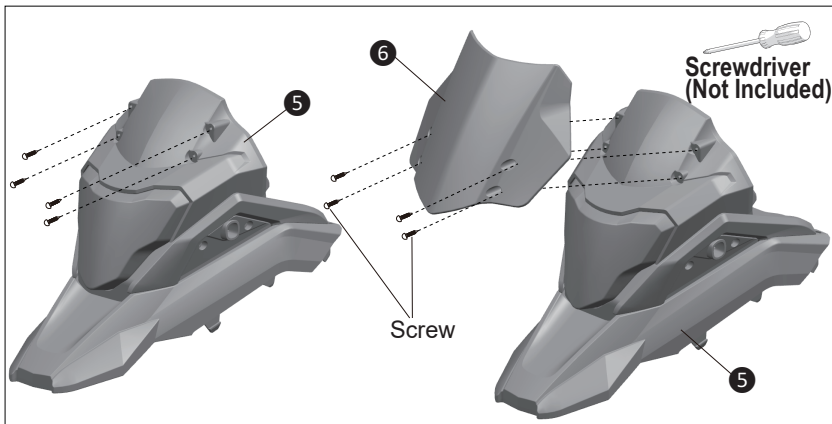


8. Motorcycle head assembly

Connect the cable plugs from the motorcycle head **5** and motorcycle body, then insert the cables into the hole on the car body. Insert the plastic hook at the bottom of the motorcycle head **5** into the front of the motorcycle body. Attach the motorcycle head **5** to the motorcycle body, using a screwdriver, secure it with two M4X14 screws.

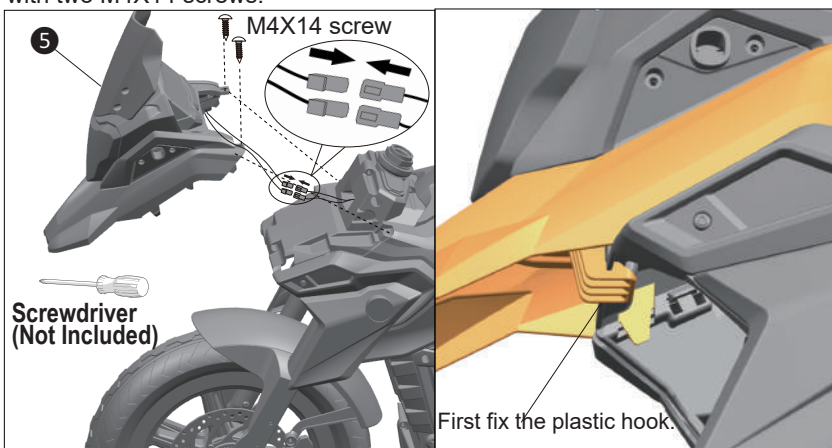


9. Handlebar assembly

Insert the handlebar into the hole of the front fork. Straighten the handlebar and front wheel ②, using a socket wrench ⑭, tighten the handlebar clockwise.

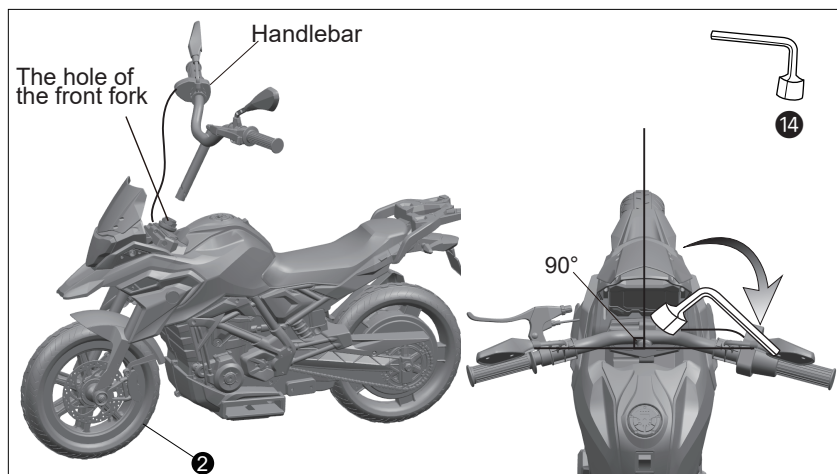

10. Handlebar cover & front turn signal assembly

Fit the handlebar cover ⑧ onto the nut in the middle of the handlebar, push it into place. Insert two front turn signals ⑦ into the left and right holes on the motorcycle body. Push them into place.

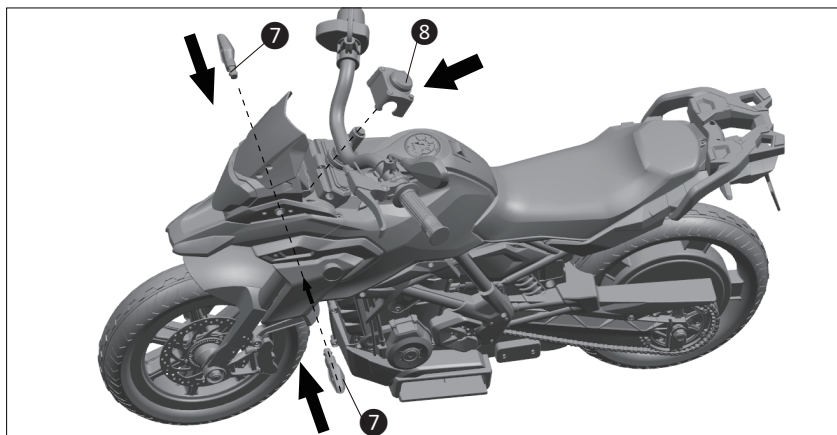

SECURITY WARNING

1. The installation and charging of vehicle should be under adult supervision at all times.
2. Recommended only for children from 3-8 years old. And do not exceed 30kg rider weight.
3. This product is ideal for driving on a hard flat surface.
4. It is strictly prohibited in the streets or the road, pot holes, and slopes.
5. Avoid driving in the sand or grass or uneven ground.
6. Children should be given full instructions on operation of the car. Improper operation can cause damage or accidents.
7. While children are driving, it is parents' duty to supervise at all time to avoid accidents.
8. Avoid driving in rains or flooded pathways. By doing so it can damage the motor, circuit and other electrical equipments.
9. Battery charger should be regularly inspected by parents to insure that the wires, plugs, cruts and other components are not damaged. Please stop using if any damage is found, until it is completely restored.
10. In order to ensure product life and safety, avoid damage to the charger, battery or electric circuit, the car must use the default configuration of a dedicated charger and power supply.
11. Rechargeable batteries should be removed from the toy before charging.
12. When no use of product, please cut off the product power, and keep all the switch to "stop" or "off" position.
13. The charger provided is not a toy. It is to be kept away from children.
14. Strictly prohibit using the non-manufacturer provided parts.

USAGE DIRECTION

Before using it, make sure that all the following works are done.

- Step described in accordance with the instructions to complete the installation of the car, the battery plug-in has been connected, the power supply has been switched on.
- Make sure that all the positions which need the screws are fixed tightly.
- Parents or guardian should ensure that children have taken the safety measures before using.

To reduce the risk during using, pay attention the followings: When driving the car ,child should sit on the car seat.

Adult or parents should take more care and guidance when child driving and can't leave away.

Pay attention to the driving environment and driving on the hard flat surface, not the unsafe environment.

For example:

- a. The trenches, the riverside, slope or uneven ground;
- b. Road or other places for driving and walking;
- c. The obstruction which is easily hitting and causing injury;
- d. Other unsafe zones.

To avoid accident, please use only in daytime or bright place, avoid using under low visibility.

FUSE

This car has a auto-reset fuse, if the car stops suddenly during driving, it is mainly caused by instantaneous current exceeds ,which makes the fuse to trip. Then just stop operating for about 8 seconds, and this fuse can be reset. Then turn on the power switch again.In order to avoid the fuse tripping and cutting off power supply, please pay attention to the following matters.



This product can't be overloaded, the maximum load is 30kgs.

Don't drag anything behind the product.

Don't let the warter or other liquid into the batteries and other electrical components.

Don't change the circuit system and structure of the product.

2. Operating(function reference diagram)

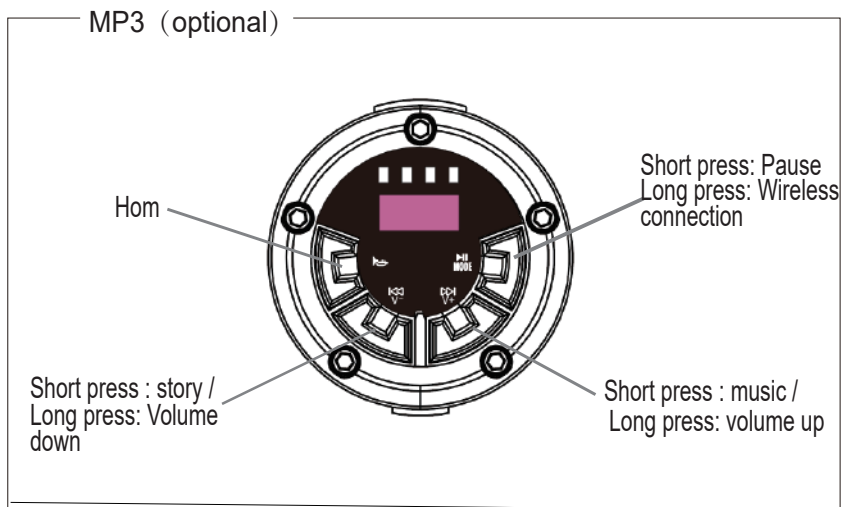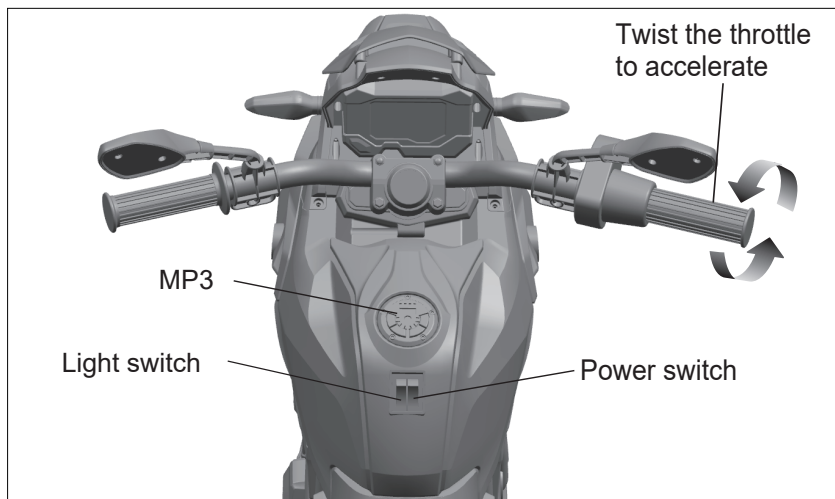


CHARGING WAY

For Safety purpose ,the charging must be done by adults.

Match two red plugs coming from two red cables before first using, use it after charging 8-12 hours.

Charging port is located at the left side of the motorcycle. Please follow the instructions to charge the battery.

- 1.Open the charging port cover.
- 2.First insert the plug of the charger into the charging port. (The car can not be used.)
- 3.Then insert the charger to the power socket.

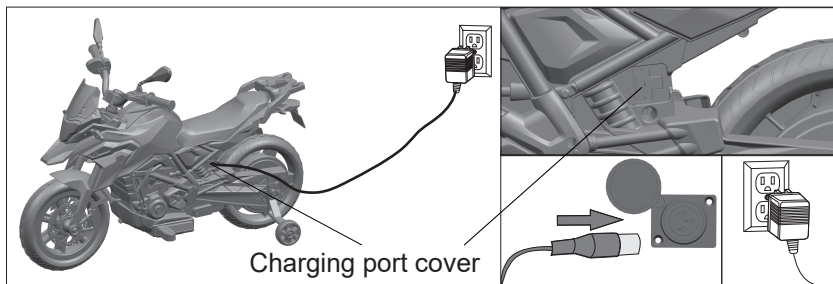

WARNING:

1. The toy is to be assembled by an adult. In unassembled state, it contains potentially hazardous sharp points & small parts, so please keep out of baby's reach.
2. CHOCING HAZARD – Small parts.
3. Not for children under 3 yrs.
4. Always wear shoes.
5. RISK OF FIRE. Do not bypass. Replace only with circuit protection device.
6. Protective equipment should be worn. Not to be used in traffic.

Attention:

- Can only use the charger and battery according to manufacturers regulations.
- Do not mix old and new or different types of batteries.
- The battery terminal should not be short circuit.
- Do not open the battery or charger.
- Do not reverse the battery.
- Before charging, please check whether the charger, battery and plug are ok, if you find any broken parts, you must stop using it immediately. And do not use it until it is fully repaired.
- The battery will be little warm when being charged, it is normal. If not, it may be caused from the short circuit of charger or circuit board.
- Must use the pressing plate to fix the battery.
- Run out of battery must be handled by adults, remove the battery which has run out from toys to recycle properly and shall not be arbitrarily discard.
- If the product is going to be stored unused long time , it must be fully charged, and charge it every 3 months ,so as to make sure the battery life.
- Charger and Battery are not toys. Keep them away from children.

Battery Disposal



The battery will eventually lose the ability to hold a charge. Depending on the count of use and varying conditions, the battery should operate for one to three years.

Important! Recycle the dead battery responsibly. The battery contains lead (electrolyte) and must be disposed of properly and legally, it is illegal in most areas to incinerate lead acid batteries or dispose of them in land field, Please take it to your local approved recycling centre or a battery retailer for safe disposal.

Do not throw the battery away with your regular household waste!

MAINTENANCE AND SERVICE

1. Before use, parents should check whether all parts like batteries, charger, wires, plug, outer body and other parts are in good condition, check whether the screws are loose and whether there are potential safety hazards. Any damaged parts founded should be repaired before using.
2. After using the product for a period of time, use a small amount of lubricating oil to the moving parts to prevent wear and tear of rust.
3. Keep the car away from fire and direct sunlight. Place it stably, not upside down. The car shall be stored indoors or outdoors under cover.
4. The car should be kept away from hot items, such as stoves or heaters, or the plastic parts will melt. When charging, the car should be kept away from inflammable materials to prevent it from catching fire.
5. Charge in time after use. Charging should be done by adults. If the product is going to be unused for a long time, it must be fully charged. Charge it every month so as to extend the battery lifespan.
6. A soft cloth must be used to clean the car. Do not use chemical solvents to clean the plastic parts. Do not use soap or water to clean the car. Driving in rainy or snowy weather, water can damage the motor, battery and circuit system.
7. When stopping or storing the car, please cut off the power and make sure all switches are in the 'STOP' or 'OFF' position.
8. Do not use fuses different from the specifications of this product.
9. Do not change the product structure and circuit system. Maintenance and repair work must be done under the guidance of the professional or technical personnel in place.
10. Do not use the product for other purposes. Put the battery in the right polarity.
11. Battery negative short circuit is prohibited. Non-rechargeable batteries cannot be charged.
12. Rechargeable batteries can only be charged under the supervision of the adult.
13. Do not mix old and new batteries or different types of batteries.
14. The battery running out of power should be removed from the car properly and not allowed to be played by children.
15. Disconnect the batteries completely when not in use and do not allow children to play with them.

TROUBLESHOOTING

Motorcycle does not move or power on	If “power” switch is in OFF position
	If the fuse is not functioning properly
	If the battery is not connected, check the red and black wires.
	If the charger is plugged in, car will not power on. Unplug charger.
	If the throttle is not functioning properly
	If the wheels stuck and cannot move
Motorcycle moves slowly	If the battery is not fully charged. Need to be charged in time
	If there is an issue with the wheels
	If rider weight exceeds specifications
Battery does not charge	If the charger is malfunctioning
	If the battery lost its capacity
	If the charger and battery connection are charged



WARNING:

1. This toy produces flashes that may trigger epilepsy in sensitized individuals.
2. Regular maintenance is required to ensure the safety of the toy.
3. The toy and in particular the following parts should be checked, maintained and / or replaced regularly. For example, the bearings, brakes, wheels, screws, bolts, connecting parts or stabilizers.
4. No modifications shall be made except in accordance with the instructions for use.
5. Repair or replace any damaged components in a timely manner.
6. Remove any sharp edges created through use, for example the plastic covering of handlebars.
7. The self-locking nuts and other self-locking fixings can lose their effectiveness after disassembly or reassembly.



WARNING:

This toy contains batteries that are non-replaceable.
A recommendation for adult supervision of young children.



WARNING:

To reduce risk of injury, adult supervision is required.
Never use in roadways, near motor vehicles, on or near steep inclines of steps, swimming pools or other bodies of water, always wear shoes, and never allow more than 1 rider.
Only use the specified by the manufacturer battery.
Only use the charger specified by the manufacturer.



WARNING:

Protective equipment (helmet, gloves, knee-pads, elbow pads, etc.) should be worn .



WARNING:

Assembly by an adult

Maximum capacity: 30kgs (66 lbs)

- This toy contains batteries that are non-replaceable.
- Rechargeable batteries are only to be charged by adult.
- Instructions to be given to the child in the proper use of the toy, particularly in the use of any braking system
- A reminder that the toy should be used with caution since skill is required avoid falls or collisions causing injury to the user or third parties.
- Exhausted batteries are to be removed from the toy.

PINGHU SHUANGXI BABY CARRIER MANUFACTURE CO.,LTD.
PINGHU BABY CARRIER INDUSTRY CITY, ZHEJIANG, CHINA