


Dodge Durango

BATTERY-POWERED RIDE-ON

4

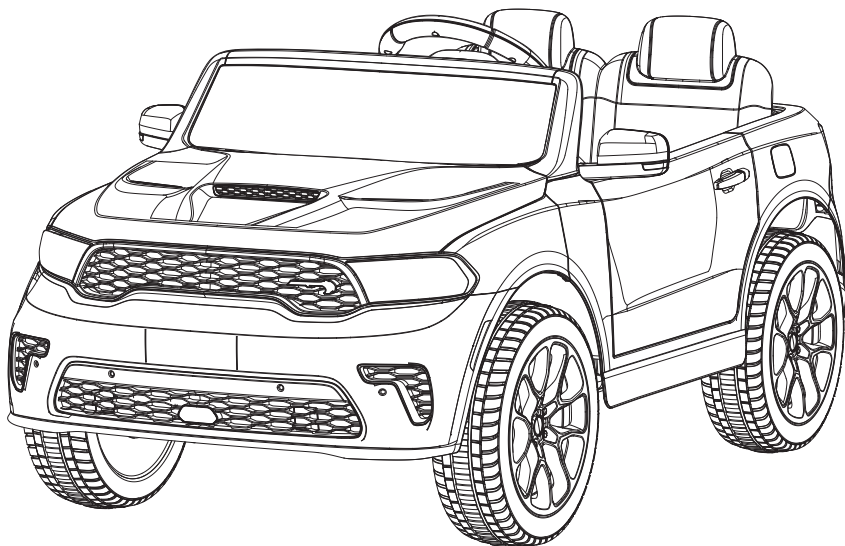

WARNING!

Must be assembled by adults.



OWNERS MANUAL

with Assembly Instructions

Read and understand this entire manual before using!

Please keep this manual for future reference as it contains important information. Before first time use, charge the battery for at least 4-6 hours, but no more than 10 hours.

On the purchase of your new Ride-On.

This ride-on car will provide your child with many miles of riding of enjoyment. To help assure you and your rider a safe ride we ask you to please read this manual carefully, and keep it for future reference.

Follow the recommendations in this manual, they are designed to improve the safety and operation of your ride-on car and its rider.

Specification

Battery	12V4.5AH *1 or 12V7AH *1 or 12V10AH *1 or 24V5AH *1 or 24V7AH *1
Charger	12V500mA or 12V1000mA or 24V500mA or 24V1000mA
input	Depend on local voltage
Steering motor	390-5000 *1
Rear motor	550-16000 *2

Suitable age:	3+ Years
Charge time:	8 - 12 hours
Load capacity:	30 kg
Size of car:	106 x 61 x 52 CM
Speed:	3-7 km/h



WARNING!

- **CHOKING HAZARD - Small parts.** Not suitable for children under 36 months. The product contains small parts, keep children away when assembling.
- Must be assembled by adults.
- Always remove protective material and poly bags and dispose before assembly.
- Protective equipment should be worn. Always wear shoes and sit in the seat when operating the vehicle.
- Only drive on level ground. Never use on the lawn.
- Never leave a child unattended.
- Keep your hands, hair, and clothes away from moving parts.
- Never leave child unattended. Direct adult supervision is required. Always keep child in view when child is in vehicle.
- To reduce the risk of injury, adult supervision is required. Never use in roadways, near motor vehicles, on or near steep inclines or steps, swimming pools or other bodies of water, always wear shoes, and never allow more than 2 riders.
- Never use in unsafe conditions such as snow, rain, loose dirt, mud, sand, or gravel, otherwise may result in an unexpected accident such as tipping over, and could damage the electrical system or battery
- Not to be used in traffic.
- This toy should be used with caution since skill is required to avoid falls or collisions causing injury to the user or third parties.
- This toy is unsuitable for children under 36 months due to its maximum speed; Maximum user weight is 30kg.
- This toy has no brake.




BATTERY INFORMATION

- Non-rechargeable batteries are not to be recharged.
- Rechargeable batteries are to be removed from the toy before being charged.
- Rechargeable batteries are only to be charged under adult supervision.
- Different types of batteries or new and used batteries are not to be mixed.
- Batteries are to be inserted with the correct polarity.
- Exhausted batteries are to be removed from the toy.
- The supply terminals are not to be short-circuited.

HINT: Some parts shown are assembled on both sides of vehicle.

Tools not included:
Screwdriver

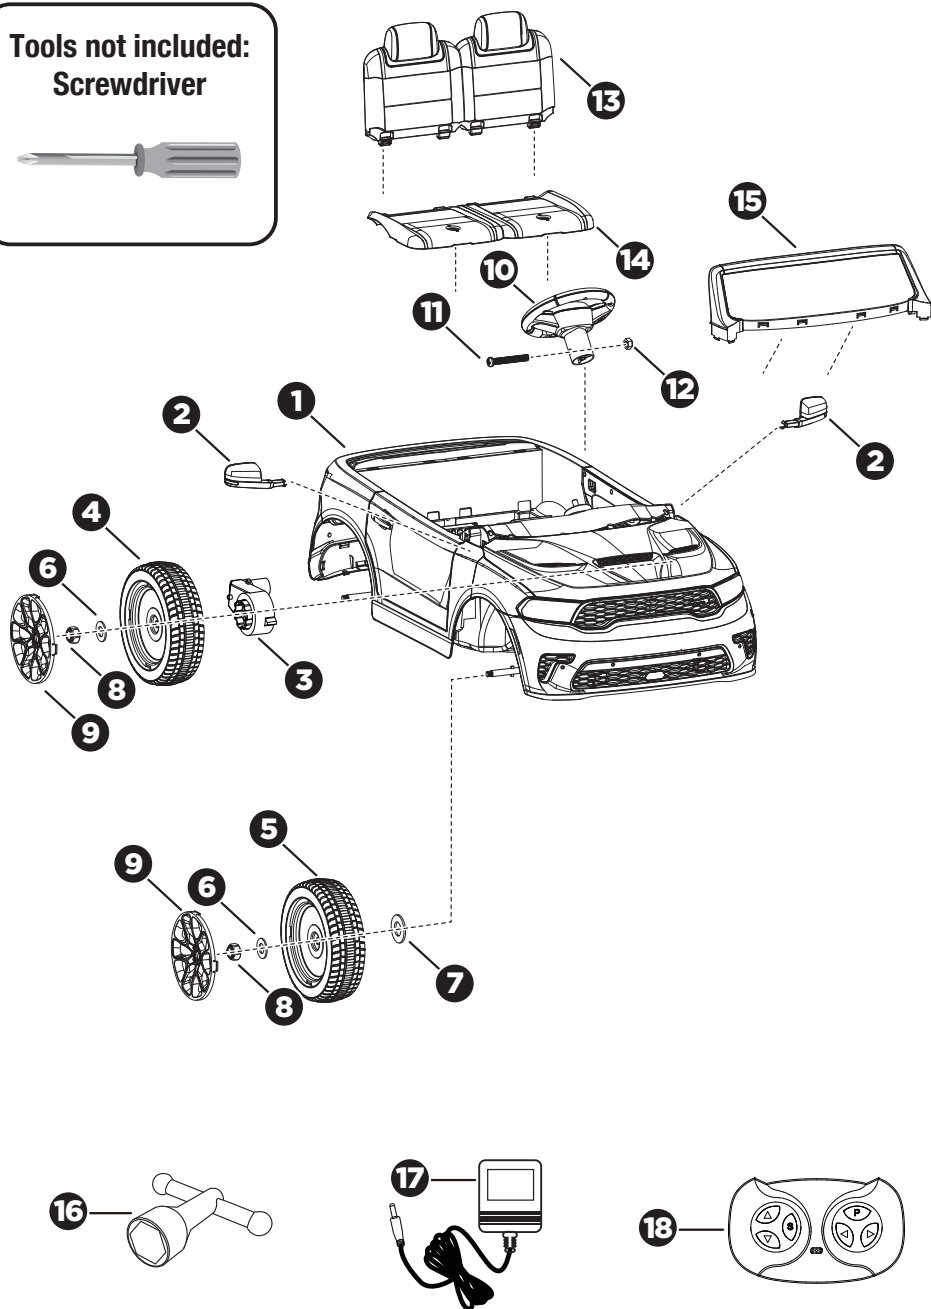


1 Vehicle body




x 1

 2 Side mirror L & R

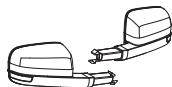

x 2

 3 Rear gear box

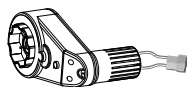

x 2

4 Rear wheel



x 2

5 Front wheel



x 2

6 M10 washer (Pre-assembled)



x 4

7 M12 washer (Pre-assembled)



x 2

8 M10 lock nut (Pre-assembled)



x 4

9 Wheel cover



x 4

10 Steering wheel



x 1

11 M5x35 machine screw (Pre-assembled)



x 1

12 M5 lock nut (Pre-assembled)



 
x 1

13 Seat back




x 1

14 Seat cushion




x 1

 15 Windshield




1

 16 Socket wrench



x 2

17 Charger

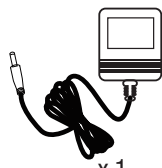


x 1


18 Remote control




x 1

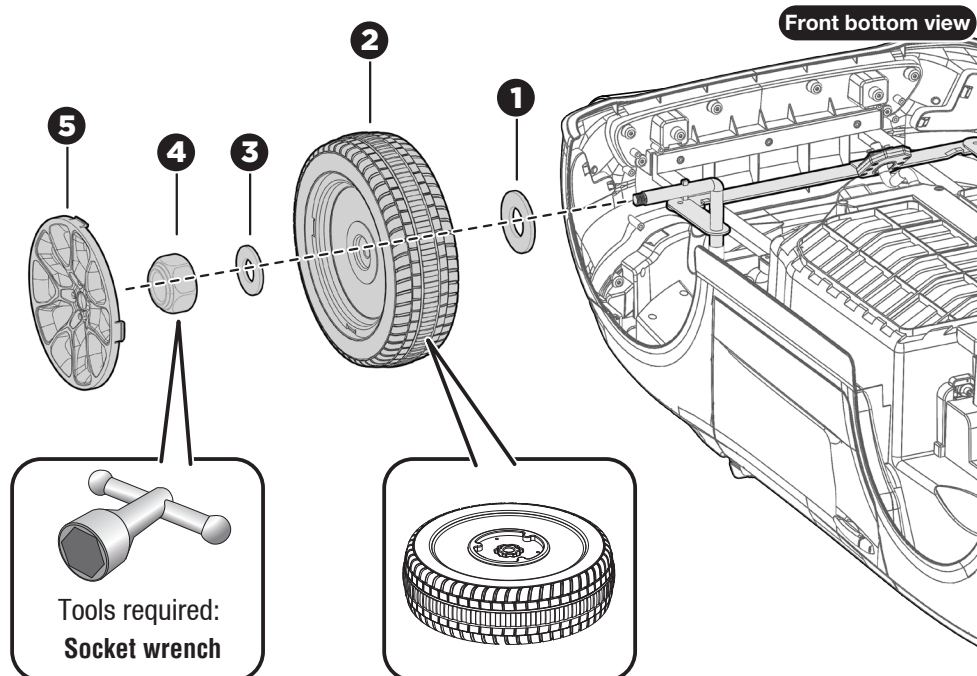

1. Slide a M12 washer onto the front axle.
 2. Slide the front wheel onto the front axle.
 3. Slide another M10 washer onto the front axle.
 4. Tighten a M10 lock nut to the end of the front axle with a socket wrench. But Do Not over tighten.
 5. “Snap” the wheel cover to the front wheel.
- Repeat for the other front wheel.

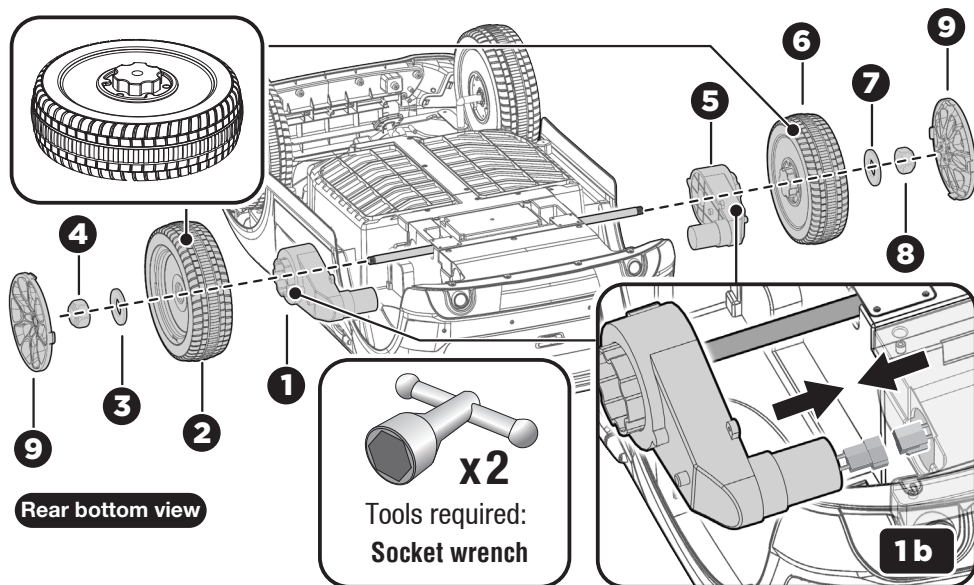


1. Slide a rear gear box on the rear axle, and plug the connector of the rear gear box to the connector from the vehicle body (fig 1b), and hide the plugged connectors into the hole in the body.
2. Slide a rear wheel onto the rear axle. Ensure the wheel driver match up with the gear box on the body.
3. Slide a M10 washer onto the rear axle.
4. Tighten a M10 lock nut to the end of the rear axle with a socket wrench.
- 5-8. Repeat the steps 1-4 to assemble the other rear wheel.
9. “Snap” the wheel covers to the wheels.


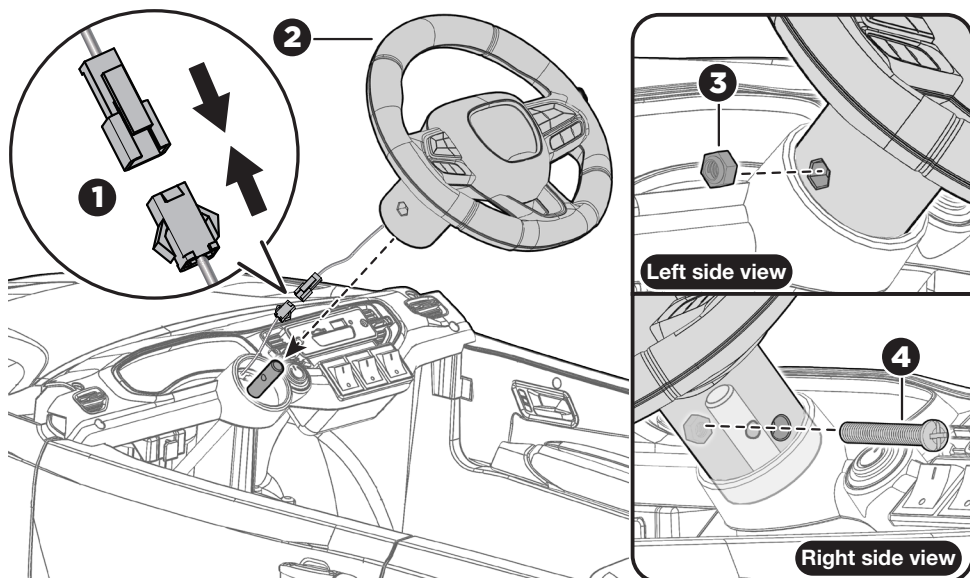



Turn the vehicle body upright.

1. Plug the sound unit connector on the steering wheel into the connector on the vehicle body.
And hide the plugged connectors into the hole in the body.
2. Fit the steering wheel to the end of the steering column.
3. Insert the M5 lock nut into the slot at right side of the steering wheel.
4. Line up the holes in the steering wheel with the holes in the steering column, insert the M5x35 machine screw and tighten with a screwdriver.
5. Insert the tabs on the windshield into the holes on the body, push until you hear it “click” into place.

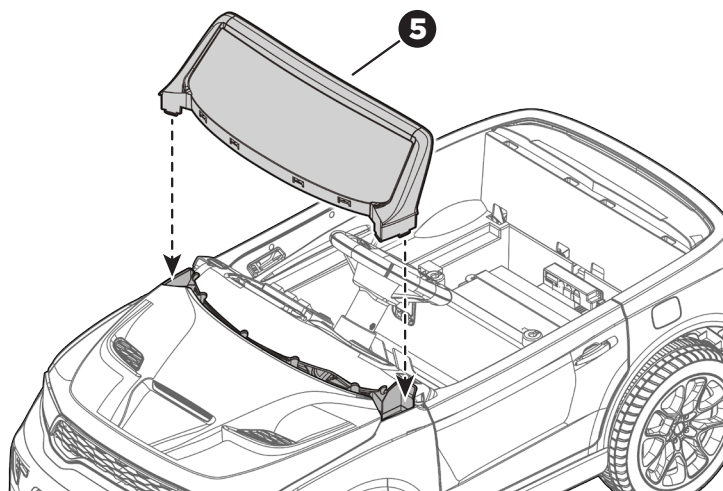


1. Fit the side mirror into the hole in the body, push until you hear it “click” into place. Repeat for the other side mirror.
2. Plug the red connector on the vehicle body into the red connector on the battery.
3. Fit the seat back to body.

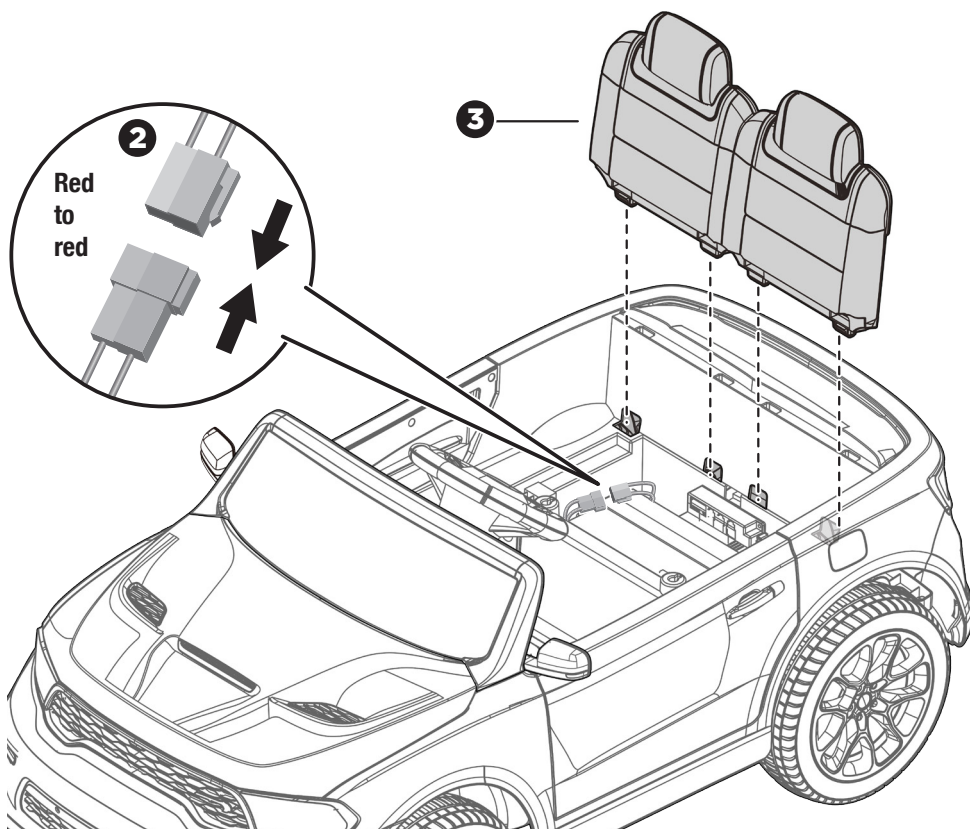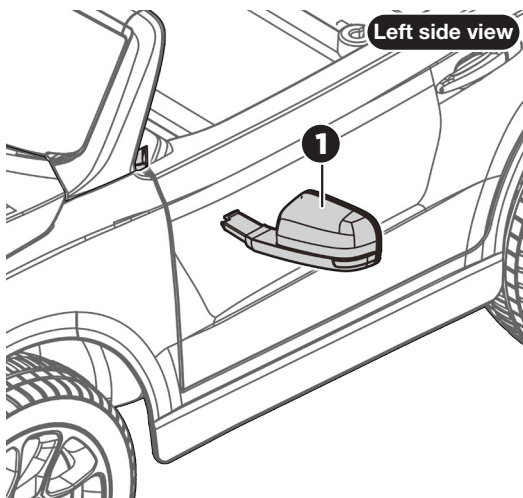

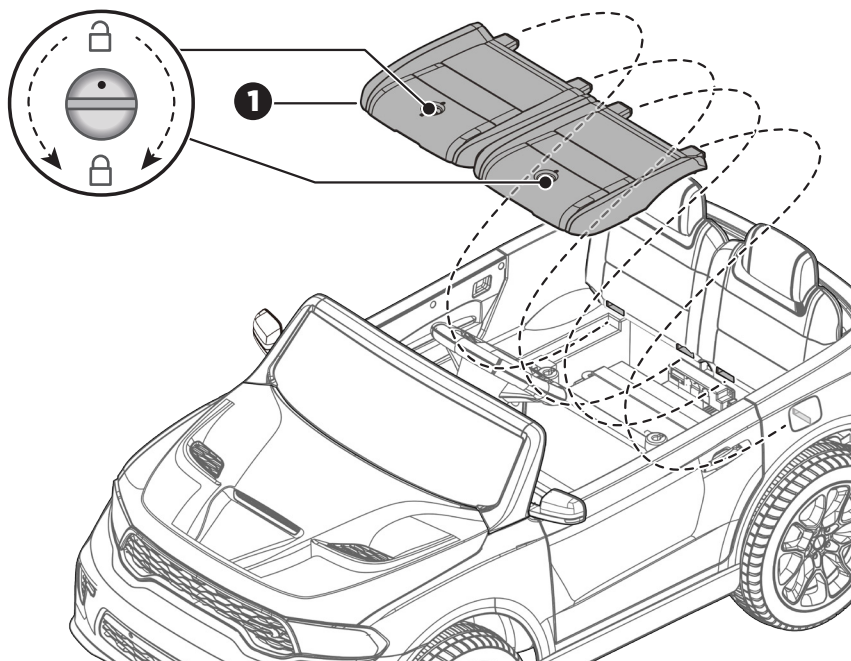

1. Fit the seat cushion to the body. Using a slotted screwdriver (not included) or coin to turn the both seat locks to the lock position.

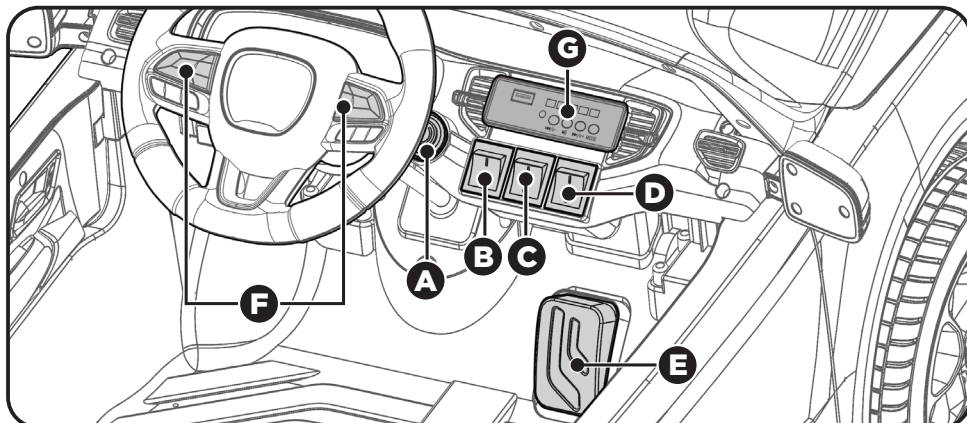

A. Power switch: Turn the vehicle on and off.

B. Forward/stop/reverse switch: Changes the direction that vehicle moves from forward to reverse.

- To move the vehicle forward, rock the switch to top position.
- To move the vehicle backward, rock the switch to down position.
- Rock the switch to the middle, the product will stop and not run.

C. Light switch: Turn the lights on and off.

D. High/Low speed switch:


- Rock the switch in 'high' position, the product will move forward in high speed.
- Rock the switch in 'low' position, the product will move forward in low speed.

E. Foot pedal: Applies power (speed) to the vehicle.

- To move the car, press the pedal down.
- To brake or slow down, release pressure from the pedal.


F. Horn sound / music buttons.

G. Audio player:

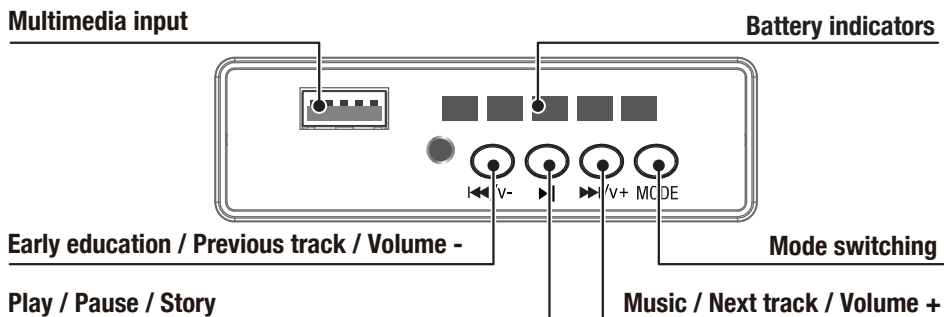


RC/MANUAL switch operation (For European Union)

If your product does not equipped with this switch, please ignore the following content.

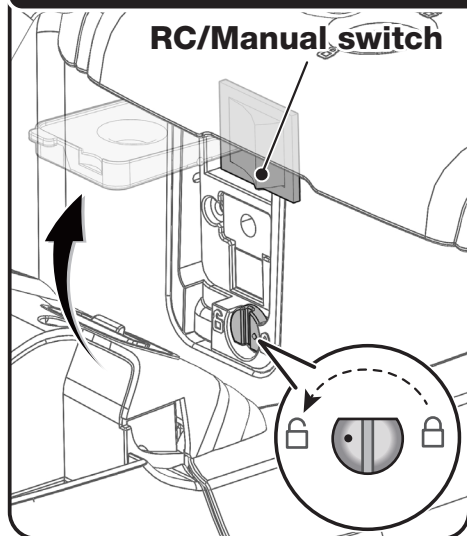

This switch is located below the seat. Turn the lock to unlock position and open the cover.

- Rock the switch to the “RC” position, and the product is only allowed to be controlled by the remote controller.
- Rock the switch to the manual position to allow manual operation of the product.

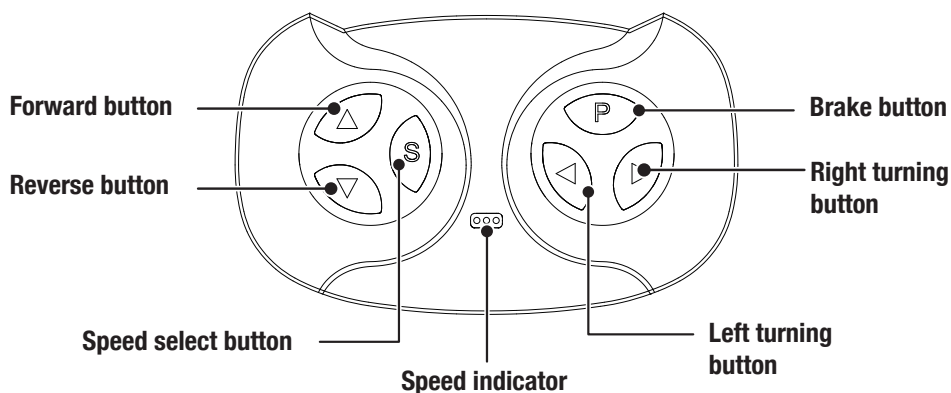

Attach the batteries of controller

Lift the battery compartment door on the back of the controller and insert two AAA(LR03) batteries.

HINT: Batteries not included. Refer to the Battery Information on the page 4.

1. Build connection

*** If your product equipped with the "RC/Manual" switch, rock it into "RC" position.**

A. Turn off the ride-on.

B. Press and hold the forward (Δ) and reverse (∇) buttons on the controller for 3 seconds, the speed indicator flashes, mean that the remote control is in the connected state.

C. Then power on the ride-on:

- The speed indicator goes to long bright, means the connection successful.
- If the speed indicator no response (keep flashing), means the connection failed. Turn off the remote controller (by removing the batteries) and the ride-on. And try again.

2. Brake button

Press the button to stop the vehicle, press it again to release the brake.

3. Speed select button

The switch operates the vehicle to move in low, normal and high speed.



NOTE:

- Leave the remote controller idling for about 10 seconds, it will shut down automatically.
- Rebuild connection when you replace the batteries of the remote controller.
- The remote control is not a toy. It is intended for adult use only and should not be made by children Use. Close supervision from an adult is always required. The receiving range may vary depending on the weather、battery and other environmental conditions.

WARNING!

- **ONLY an adult is allowed charge and recharge the battery!**
- **This product with Charging Protection: when charging, all functions will be cut off.**

- Turn off the product when charging.
- Before the first use, you should charge the battery for 4-6 hours. Do not recharge the battery for more than 10 hours to avoid overheating the charger.
- When the vehicle begins to run slowly, recharge the battery.
- After each use or once a month minimum recharge time as 8 to 12 hours, less than 20 hours at most.
- Use the only rechargeable battery and charger supplied with your vehicle. NEVER substitute the battery or the charger with another brand. Using another battery or charger may cause a fire or explosion.
- Do not use the battery or charger for any other product.
- When the product is stationary, the power indicator will tell you how much power is remaining in the battery. If only one indicator light remains, please recharge the battery.

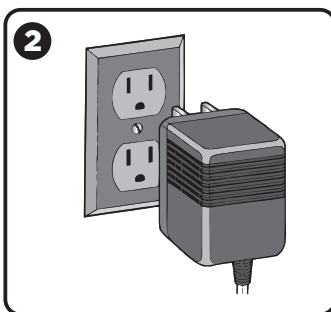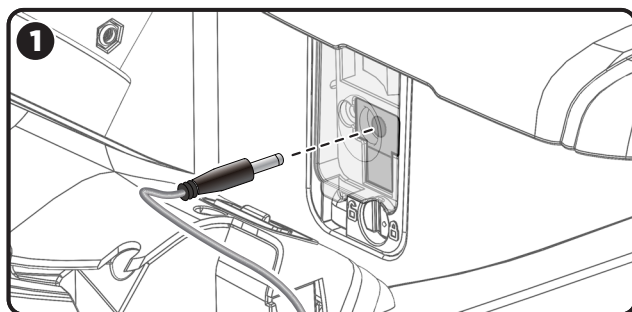

- 1. Plug the charger port into the input socket (the socket is below the seat).**
- 2. Plug the charger plug into a wall outlet. The battery will begin charging.**

Problem	Possible Cause	Solution
Vehicle does not run	Battery low on power	Recharge battery.
	Thermal fuse has tripped	Reset fuse, see <Fuse>
	Battery connector or wires are loose	Check that the battery connectors are firmly plugged into each other. If wires are loose around the motor contact your distributor please.
	Battery is dead	Replace battery, contact your distributor please.
	Electrical system is damaged	Contact your distributor please.
	Motor is damaged	Contact your distributor please.
Vehicle does not run very long	Battery is under charged	Check that the battery connectors are firmly plugged into each other when recharging
	Battery is old	Replace battery, contact your distributor please.
Vehicle runs sluggishly	Battery low on power	Recharge battery, contact your distributor please.
	Battery is old	Replace battery, contact your distributor please.
	Vehicle is overload	Reduce weight on vehicle.
	Vehicle is being used in harsh conditions	Avoid using vehicle in harsh conditions ,see <Safety>.
Vehicle needs a push to go forward	Poor contact of wires or Connectors	Check that the battery connectors are firmly plugged into each other. If wires are loose around the motor, contact your distributor please.
	“Dead Spot” on motor	A dead spot means the electric power is not being delivered to the terminal connection and the vehicle needs repair. Contact your distributor please.
Difficult shifting from forward to reverse or vice-versa	Attempting to shift while the vehicle is motion	Completely stop the vehicle and shift, see <Use Your New Vehicle>
Loud grinding or clicking noises coming from motor or gear box	Motor or gears are damaged	Contact your distributor please.
Battery will not recharge	Battery connector or adapter connector is loose	Check that the battery connectors are firmly plugged into each other.
	Charger not plugged in	Check that the battery charger is plugged into a working wall outlet.
	Charger is not working	Contact your distributor please.
Charger feels warm when recharging	This is normal and not a cause for concern	

Completely read through this manual and the troubleshooting guide table before calling. If you still need help resolving the problem **Contact your distributor please.**

- It is parents' responsibility to check main parts of the toy before using, must regularly examine for potential hazard, such as the battery, charge, cable or cord, plug, screws are fastening enclosure of other parts and that in the event of such damage, the toy must not be used until that damage had been properly removed.
- Make sure the plastic parts of the vehicle are not cracked or broken.
- Occasionally use a lightweight oil to lubricate moving parts such as wheels.
- Park the vehicle indoors or cover it with a tarp to protect it from wet weather.
- Keep the vehicle away from sources of heat, such as stoves and heaters. Plastic parts may melt.
- Recharge the battery after each use. Only an adult can handle the battery. Recharge the battery at least once a month when the vehicle Raider is not being used.
- Do not wash the vehicle with a hose. Do not wash the vehicle with soap and water. Do not drive the vehicle in rainy or snowy weather. Water will damage the motor, electric system and battery.
- Clean the vehicle with a soft, dry cloth. To restore shine to plastic parts, use a non-wax furniture polish. Do not use car wax. Do not use abrasive cleaners.
- Do not drive the vehicle in loose dirt, sand or fine gravel which could damage the moving parts, motors or the electric system.
- When not using, all the electrical source should be turn off. Turn off the power switch and disconnect the battery connection.

Battery Disposal



The battery will eventually lose the ability to hold a charge. Depending on the amount of use, and varying conditions, the battery should operate for one to three years.

Important! Recycle the dead battery responsibly. The battery contains lead acid (electrolyte) and must be disposed of properly and legally. It is illegal in most areas to incinerate lead acid batteries or dispose of them in landfills. Take it to a federal or state-approved lead acid battery recycler, such as local automotive battery retailer.

Do not throw the battery away with your regular household waste!

The battery features a thermal fuse with a reset fuse that will automatically trip and cut all power to the vehicle if the motor, electric system or battery is overloaded. The fuse will reset and power will be restored after the unit is turned OFF for 20 seconds and then turned ON again. If the thermal fuse trips repeatedly during normal use, the vehicle may need repair. **Contact your distributor please.**

To avoid losing power, follow these guidelines:

- Do not overload the vehicle.
- Do not tow anything behind the vehicle.
- Do not drive up steep slopes.
- Do not drive into fixed objects, which may cause the wheels to spin, causing the motor to overheat.
- Do not drive in very hot weather, components may overheat.
- Do not allow water or other liquids to come in contact with the battery or other electric components.
- Do not tamper with the electric system. Doing so may create a short, causing the fuse to trip.



RISK OF FIRE. Do not bypass. Replace only with a new fuse.

Our products are suitable for ASTM F963; GB6675; EN71 and EN62115 standard

Made in China